

12V Constant Voltage LED Driver

Non-Dimmable

Installation Guide

Please retain for future reference

Models

ILDCV12VD20N20BUS	(20W)
ILDCV12VD40N20BUS	(40W)
ILDCV12VD50N20BUS	(50W)
ILDCV12VD75N20BUS	(75W)



All Trademarks Acknowledged

Compliant to: EMC EC 2014/30/EU, LVD EC 2014/35/EU



PLEASE READ BEFORE USE

integral™
LED

IP20

Constant Voltage 12V LED Driver Installation Guide

⚠ WARNING ⚠

RISK OF ELECTRICAL SHOCK. ALWAYS SWITCH OFF POWER AT THE MAINS BEFORE INSTALLING OR MAINTAINING THIS LED DRIVER

IMPORTANT NOTICE

 
- This LED driver should be installed according to the instructions in this guide and by a qualified electrical installer. All electrical work must be completed in accordance with the latest IET regulations (formally IEE) for the UK and in accordance with all applicable regulations and laws in the country in which it being installed
- Always SWITCH OFF the power at the mains when installing, adjusting or maintaining the LED driver
- The LED Driver must be installed in indoor dry areas only, avoid any contact with moisture or water and protect against excessive heat and allow adequate ventilation (operating temperatures: -20 C to +45C)
- Observe the correct wiring and polarity for INPUT (200~240V AC 50Hz) and OUTPUT (12V DC). Errors in connecting the device can lead to irreparable damage or personal injury
- An electronic protection circuit will switch OFF the power supply internally in case of a short/open circuit or overload on the 12V output circuit. Once faults are corrected the LED driver will reset automatically
- Do NOT dismantle the driver; there are NO user-serviceable parts inside
- This LED driver is Non-Dimmable – Do NOT install in a dimmable circuit

FOR THE BEST PERFORMANCE AND TO AVOID ANY DAMAGE TO THE DRIVER OR CONNECTED DEVICES

- This is a SWITCH MODE 12VDC CONSTANT VOLTAGE LED Driver – It must ONLY be used with suitable CONSTANT VOLTAGE LED LAMPS or STRIPS. Do NOT use with NON-LED devices. Ensure a suitable load is connected
- Connected loads to the 12V OUTPUT should be connected in PARALLEL only
- To allow for power variation in installations, the connected load wattage should be up to 90% of wattage of the LED driver. Do NOT overload the LED driver
- Before mounting the driver, determine a suitable and safe installation position (see fig 3) and consider how the driver will be switched ON and OFF
- Recommended INPUT and OUPUT cable specification : H03VVH2-F 2 X 0.75mm²
- To maintain EMC compliance the output cable to LED devices should not exceed 2M in length

INSTALLING THE LED DRIVER

 
1. Switch the power OFF at the mains
2. Unscrew and remove the connector covers
3. Connect the 12V load wires on the OUTPUT side – Ensure the correct polarity. (see fig 1)
4. Connect the mains supply wires to the INPUT side – Ensure the correct polarity. (see fig 2)
5. Check connections and for any loose strands of wire. Screw down the connector covers ensuring the outer wire insulation is held under the cord grip.
6. Switch ON power and confirm operation
7. Once the position and functionality is confirmed. Switch OFF the power at the mains and mount the LED driver if required using suitable fixings (not supplied)

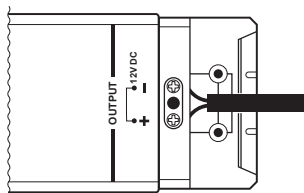Fig 1**OUTPUT 12V DC load****Models:**




ILDCV12VD20N20BUS (20W)

ILDCV12VD40N20BUS (40W)

ILDCV12VD50N20BUS (50W)

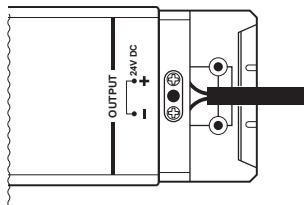**Models:**

ILDCV12VD75N20BUS (75W)

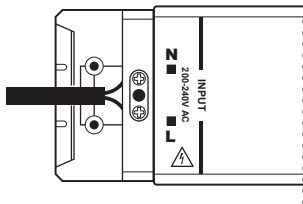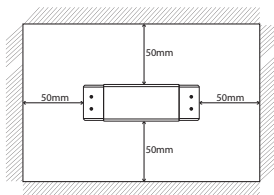   Fig 2**INPUT 200-240V AC (50Hz) Supply****Fig 3****Mounting Location**

SPECIFICATIONS:

Model No	Input Voltage (AC)	Type	Input Current	Output Voltage (DC)	Max Power Rating	IP Rating	Ambient Temp Max (ta)	Case Temp Max (tc)
ILDCV12VD20N20BUS	200~240V +/- 10% (50Hz)	Constant Voltage	<0.30A	12V +/- 0.5%	20W	20	45	80
ILDCV12VD40N20BUS			<0.30A		40W		45	85
ILDCV12VD50N20BUS			<1A		50W		45	80
ILDCV12VD75N20BUS			<0.50A		75W		45	80

Limited 3 Year Warranty

This LED driver is for indoor use only. Improper installation, abuse or miss-powering of the driver or failure to use the driver for its intended use will void the warranty. Proof of purchase is required for all returns. Your statutory rights remain unaffected.

Please see www.integral-LED.com/warranty

Questions? Please contact your supplier or see integral-LED.com



All Trademarks Acknowledged

Integral LED is a division of Integral
Memory plc London NW10 0UF



integral™ LED

IP33

PLEASE READ BEFORE USE

Flexible 12V INTEGRAL LED Strip IP33 Installation Guide



**DO NOT CONNECT THE LED STRIP DIRECTLY TO A MAINS SUPPLY.
THE LED STRIP MUST ONLY BE CONNECTED TO A SUITABLE 12V LED DRIVER.**

IMPORTANT NOTICE

- This product should be installed according to the instructions in this guide and by a qualified electrical installer.
- All electrical work must be completed in accordance with the latest IET wiring regulations (formally IEE) for the UK or in accordance with all applicable regulations and laws in the country in which it is being installed. This product falls under a low voltage Class III circuit category.
- Switch OFF power at the mains before installing the LED strip
- Strip must only be installed indoors, in a dry area
- Avoid looking directly at the strip when turned on, for a long period of time
- Observe the operating temperature of the LED strip: -25C to +60C

To avoid any damage to the LED strip or driver;

- Always disconnect or switch off the power supply before cutting or connecting an LED strip. Wait at least one minute before connecting to a recently powered driver.
- Always handle the LED strip with care.
- Observe the correct polarity for 12V connections, positive (+ RED) to positive and negative (-BLACK) to negative.
- Safely route and secure all wires so they cannot be pinched or damaged
- Do NOT power the strip whilst in its packaging reel
- Do NOT twist the LED strip or touch the LEDs on the strip surface
- To avoid damage or malfunction, Do NOT coat the LED strip with paint, varnish or similar.

 
In the bag

1 X 5M ±5cm IP33 INTEGRAL LED STRIP on reel pre-fitted with an appropriate connector to connect to a suitable power supply.

Accessories For IP33

1 X Clip-on strip connector

If you cut the strip into two pieces, you can use this connector to power the remaining portion of the strip.



INTRODUCTION

- This installation guide is for flexible, IP33 constant voltage self-adhesive LED strips produced by Integral LED.
- Depending on your installation, you can purchase optional or additional accessories such as mounting clips and connectors

A) CHOOSING A 12V LED DRIVER

- This LED strip operates with a 12V DC constant-voltage power supply known as a driver. Drivers are sold separately and are available in varying wattage outputs.
- The specification of the driver required will depend on the total power requirement of the connected strip(s). The power output of the driver (wattage rating) must be at least 10% higher than the total required wattage of the strip(s) being powered.

For example, if you are installing 5 LED strips of 1M each and the power requirement of each 1M strip is 3W/metre – the total power requirement is 15W. The power rating of the driver should be at least 10% above 15W i.e. A minimum of 17W

B) PRE-INSTALLATION GUIDE

LED strips make a great addition to any domestic or commercial environment. They can change the mood and look of a space instantly and are very energy efficient. The possibilities are endless so the requirement for each lighting project will be different.

It is worth taking some time to plan your project for the desired effect before removing the backing tape on the LED strip. The specification, length, mounting position and distance from an object determines the appearance of a lit LED strip. You will also need to consider the placement and concealment, of the 12V LED driver and wires, and the power switch to turn the LED strip ON and OFF.

 
We recommend that you test the strip by temporarily holding the LED strip in place by using a suitable tape, such as masking tape. Safely connect the power supply - you can then carefully move the strip to try different angles and positions to gain the desired illumination effect and position. Check for light spots, reflections and shadows.

Please consider the surface you are applying the LED strip to; the surface should be stable, clean and smooth. On removal of a fixed LED strip - damage to paint, wallpaper or other substrates may occur. Take care in measuring the length required before cutting the strip, take into account the space required for the connector. You may also consider using a spirit level, plumb line or other guide if required.


C) POWER SUPPLY CONFIGURATIONS AND WIRING

1) POWERING THE STRIP

The LED strip is powered by a suitable 12V LED driver. Ensure the power is OFF and that the correct polarity is observed when wiring the LED driver. (Fig 1)

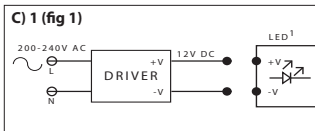


Typical installation configuration	
Straight run An LED driver powers the first LED strip. Additional strips can be connected in series. The installer will need to consider voltage drop (see 2).	fig 2
Powered from the centre Power one or two equal lengths of LED strip from the centre. This configuration will give the best results.	fig 3
Additional accessories (sold separately) may be required for complex configurations.	

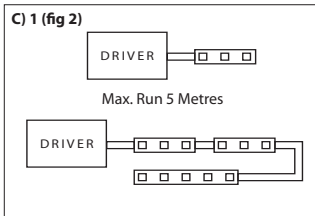 

2) VOLTAGE DROP


 
If the total length of LED strips powered by a single LED driver is too long, you may find that the LEDs furthest away from the driver will be unlit or dimmed. To avoid this you will need to use additional drivers. For instance if you are powering 2 X 5M strips from one driver – you will need to split the run into separate 5M runs each powered by its own driver.

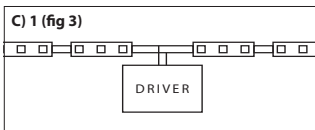

D) PRECAUTIONS FOR INSTALLING THE INTEGRAL LED STRIP



1. Please check the bag contents before installation.
2. Do not remove the strip from the packaging until ready for installation.
3. Do NOT touch or press the LEDs or other components during installation (fig 4).
4. Do not power the strip before completely releasing it from the reel.
5. Do not twist the LED strip (fig 5).
6. Do not install the product in an environment, which exposes it to direct sunlight, rain, water, moisture or other particles.
7. If the product needs to be cut to length; please measure carefully and cut squarely at the appropriate cut marks only using a sharp pair of scissors (fig 6).
8. To fix the LED strip to a smooth surface; the strip is pre-fitted with 3M adhesive backing tape. Ensure that the mounting surface is clean, dry and free from any oils, grease or wax.
9. The Integral LED strip has excellent flexibility but requires the bending diameter to be no smaller than 50 mm (fig 7).
10. The strip is pre-fitted with positive and negative connection wires at one end. Check the supply voltage and wire connections before switching the power on.

  ⚠ CAUTION – Twisting, pressing on LEDs, over-bending the strip, cutting at non-cut points, incorrectly powering the strip or exposing a standard strip (IP33) to water, particles or direct sunlight will invalidate the warranty (your statutory rights remain unaffected).

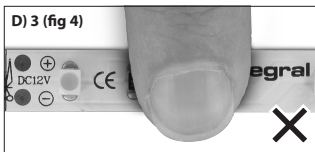

E) INSTALLATION INSTRUCTIONS

  1. To ensure a successful installation - please read the precautions and pre-installation recommendations above.
2. The mounting surface must be clean, dry and free from dust or grease.
3. Release the LED strip from the package and unreel.
4. Measure and cut the LED strip to the required length (only cut at the cut marks with power OFF).
5. Remove the 3M self-adhesive backing tape from the strip gradually during installation. Do not remove it all at once to avoid the strip becoming entangled and sticking to itself (figs 8 and 9).
6. Stick the LED strip to the mounting surface by pressing on the strip in between components only. Do NOT press on the LEDs or other components on the strip.
7. You can use optional mounting clips (purchased separately) to secure the strip at intervals (fig 10). The mounting clips are supplied without screws and it is the responsibility of the installer to select the correct type of screw depending on mounting substrate.
8. Once the strip is affixed, it is then ready to be wired. Please see section C1.

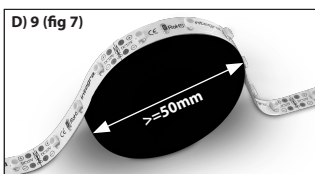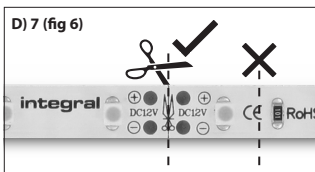

F) JOINING TWO STRIPS TOGETHER WITH ADDITIONAL ACCESSORIES

1) Integral LED is keen to make the installation easier and less labour intensive. If you are joining two IP33 strips together, our press-on connectors should be used which are available for purchase.

a.	To connect strips inline	ILS33CONN/BLOCK5PC (5pcs/pack) (fig 11)
b.	To connect Strips not inline or spaced	ILS33CONN/CABLE5PC (5pcs/pack) (fig 12)
c.	To connect power to a cut strip	ILS33CONN/POWER5PC (5pcs/pack) (fig 13)



CAUTION : When applying connectors to the strip, ensure that the correct polarity is observed.





Always observe polarity for 12V connections, positive (+) to positive and negative (-) to negative.

Check the wire connections before switching the power on. Ensure that the strip is cut correctly and that the strip terminals make good contact with the connector terminals. Ensure the back tape of strip is removed completely when connectors are applied.

G) TROUBLESHOOTING

Always switch OFF power before adjusting the wiring or strip.

Symptoms	Possible Causes	Solutions
None of the LEDs light up	1. No power to the driver.	Please check to see if there is power being delivered to the drivers power supply via the connection to AC power.
	2. The power supply driver connection is wired incorrectly.	Check the polarity for 12V connections, positive (+) to positive and negative (-) to negative. See power supply driver wiring diagram (Section C1).
	3. There is no output voltage from the power supply driver.	Check the power supply driver; it may need to be replaced.
	4. The strip wires are not connected properly to the strip or to the driver.	Check the connectors and polarity. Make sure strip is cut correctly and strip terminals are making a connection within the connector.
	5. Overvoltage may have damaged the LEDs.	The working voltage should be within 5% of the rated voltage (12V). If overvoltage has damaged the product then this is not covered by the warranty.
Some of the LEDs do not work	1. LEDs on the strip are powered in series. If some LEDs in the centre of the strip do not light and LEDs towards the end of the strip do light then the LEDs have failed.	Strip may need to be replaced.
	2. If the LEDs in the beginning of the strip work but none are working after the first non-working LED then there is a connection issue. This could be caused by a poor connection or if the connector is not fitted to the strip correctly. This could also be a result of the strip being bent more than the recommended bending diameter.	Please check the strip connection from the section of the strip that is not lit. Check soldering connections. Check connector joins. Strip may need to be replaced.
The strip when lit is dim or not evenly lit	1. The power load (total Wattage of all strips connected) exceeds the rated Wattage of the power supply driver (total output).	The power supply needed will depend on the total length of strips in use. The power supply driver will need to have an output that is at least 10% more than the total wattage needed to power the strip. See section A.
	2. The length of wire between the strip and power supply or the length of the wire in between each strip is too long.	1. Use shorter strip supply wires. 2. Use thicker supply wires.
	3. Too many LED strips are connected to the power supply driver.	2. Make sure that the total wattage of all LED strips is within 90% of the total output of the power supply driver. If the total wattage of all strips exceeds the driver output then please use a higher wattage driver.
All LEDs are flashing intermittently	There is an intermittent connection at the power supply driver.	Please check driver to AC connection and driver to strip connection.
Some of the LEDs are flashing intermittently	There is an intermittent connection at each strip branch connection.	Please check all strip connections and check connector joins.
LEDs blink once when power is switch on	Please check that the driver is compatible.	This is a 12V constant voltage LED strip. You will need to power the strip using a 12V constant voltage LED driver.

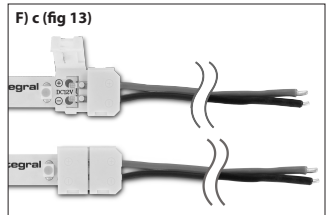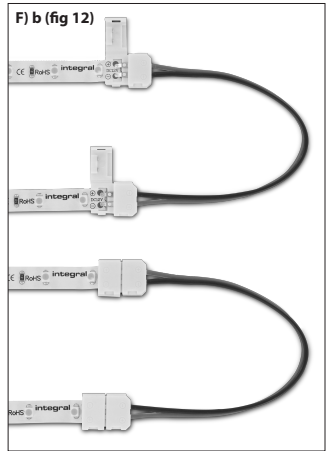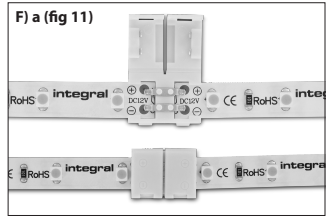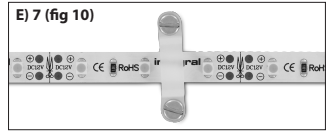    

Limited 3-year warranty

This product is for indoor use in dry locations. Improper installation, abuse or miss-powering of the strip or failure to use the LED strip for its intended purpose will void the warranty. LED strips cannot be returned or exchanged once cut (unless the strip is faulty due to parts or workmanship). Proof of purchase is required for all returns. Your statutory rights remain unaffected. Please see www.integral-led/warranty

Questions? Please contact your supplier or see integral-led.com



All Trademarks Acknowledged

Integral LED is a division of Integral Memory plc
London NW10 0UF