

# integral™ LED

INSTRUCTIONS D'INSTALLATION  
 INSTALLATIE INSTRUCTIES  
 INSTRUCCIONES DE INSTALACIÓN  
 INSTALLATIONSANLEITUNG  
 INSTRUKCJE INSTALACJI  
 INSTRUÇÕES DE INSTALAÇÃO


True Solar - Solar LED Spike light



IS 1001



ILSSKB012

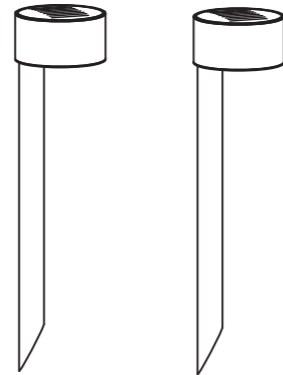


ILSSKB013


## 1 Installation / Installation / Installatie / Instalación / Installation / Instalacja / Instalação

ILSSKB012/ILSSKB013


1.1

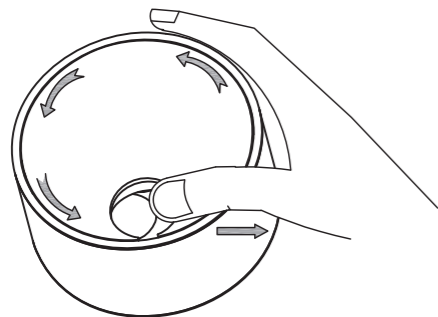


1.2

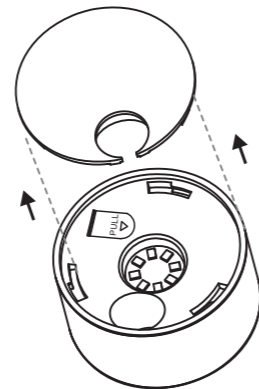


Before first use

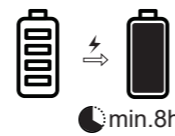


1.3

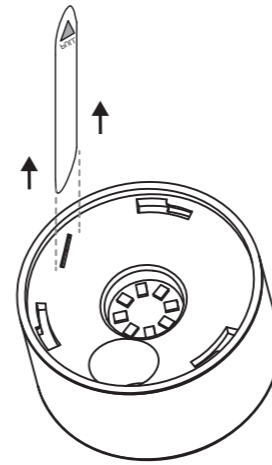


1.4

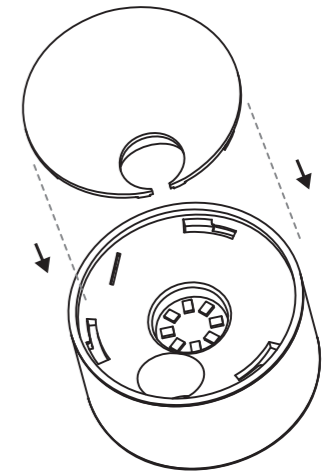

1.5

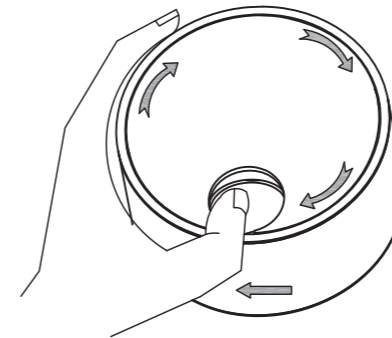


1.6

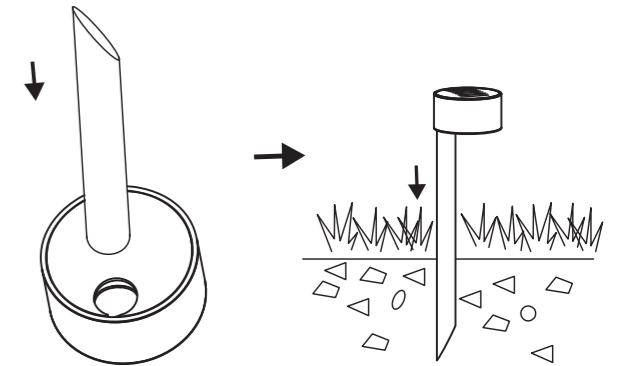


## 2 Replaceable battery / Batterie remplaçable / Vervangbare batterij / Bateria reemplazable / Austauschbarer Akku / Wymienna bateria / Bateria substituível


2.1

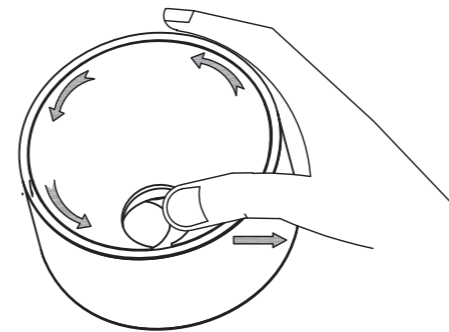


2.2

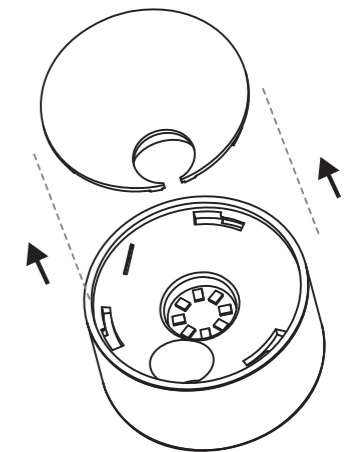


2.3

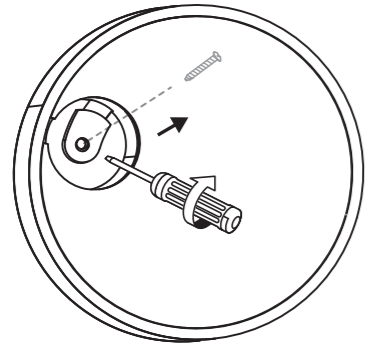


2.4

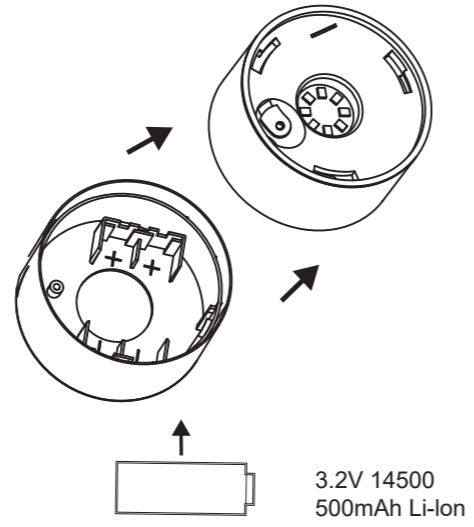

2.5

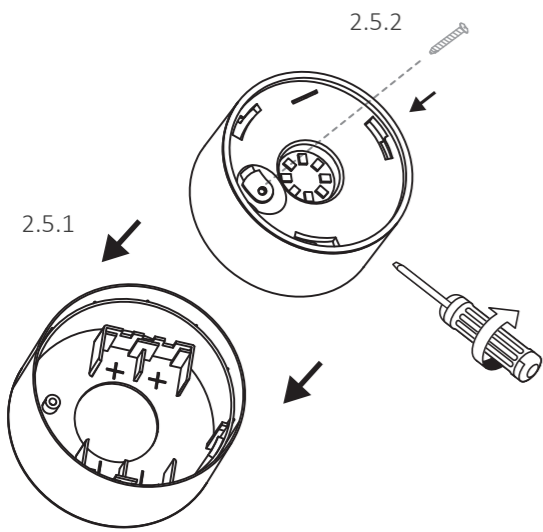

2.6

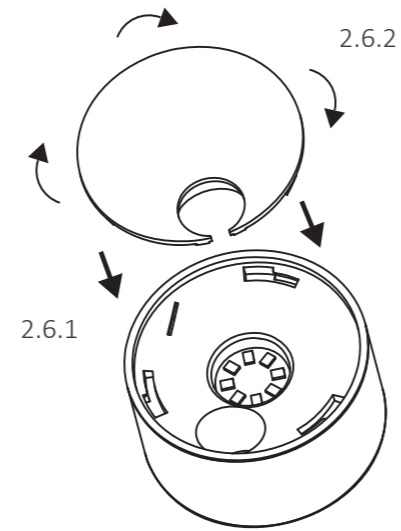

Warranty/ Technical  
& contact information  
are all available at  
[www.integral-led.com](http://www.integral-led.com)



Integral LED is a division of Integral Memory plc:  
Unit 6, Iron Bridge Close, Iron Bridge Business Park,  
London, NW10 0UF, UK  
Integral Europe BV, 2801 DG, NL

ILSSKB012\_V1