


# STANDALONE INTERFACES

## USB-DMX 512 & 1024 CHANNELS

V.1.5

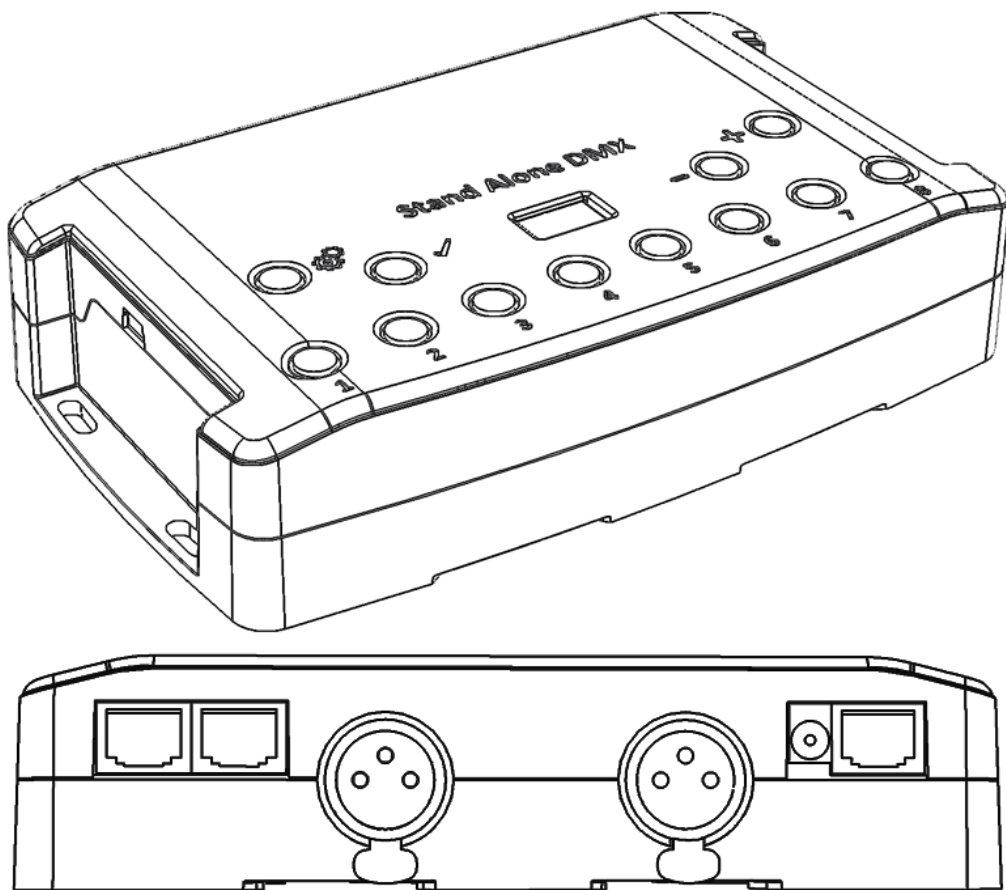

---

## SUMMARY

Hardware technical specifications .....	4
Front Face of the 512 / 1024 channels interfaces.....	5
Side Faces of the 512 / 1024 channels interfaces.....	5
Top Face of the 512 / 1024 channels interfaces.....	6
Interface buttons and display features.....	7
Internal clock setting .....	9
Zone Mode (1024 Channel Interfaces Only).....	9
Zone configuration in the software .....	10
Stand alone Interface Triggers.....	11
Switch to Stand alone mode.....	11
Interface Mode settings.....	12
LED buttons trigger.....	14
Contact wiring and connections with RJ45 Pins.....	15
Triggering commands.....	17
IR Remote control unit and IR receiver.....	18
DMX IN trigger connection.....	19
DMX IN triggers via another DMX signal in standalone.....	20
Setup DMX in mode in software use.....	21
RS232 Triggers in Stand ALone .....	23
Time triggers with clock and calendar .....	25
Save and recover the last scene after the power cut off:.....	27
Scene trigger priorities: .....	27
Play in Priority.....	27
Dmx merging in standalone .....	28
Configuration of the Master/Slave interfaces .....	29
Setting of the Master/Slave interfaces.....	30
SD Card .....	31
Battery .....	31
Dimensions of the interface.....	31
Top face.....	31
Side faces .....	32

Bottom face.....	32
Multiple usb devices connections.....	33
Power supply with external + USB .....	33
Standard DMX 512 installation.....	34
Recommended DMX512 installation.....	34

## HARDWARE TECHNICAL SPECIFICATIONS


<b>Input</b>	USB 2.0 via Mini USB
<b>Number of DMX Outputs (512/1024)</b>	Up to 512 / 1024 on 3 pin XLR (XLR5 optional)
<b>DMX Modes (512)</b>	2x512 (Splitter, PC + Stand Alone) or 512 in/out (PC mode)
<b>DMX Modes (1024)</b>	2x512 ,1024 or 512 in/out (PC + Stand Alone)
<b>DMX Input (512)</b>	Yes (PC only, DMX record, DMX trigger)
<b>DMX Input (1024)</b>	Yes (PC and Stand Alone mode, DMX record, DMX trigger)
<b>Stand Alone Mode (512)</b>	Yes, 2x512 (splitter), fine DMX channels ( 16 bits)
<b>Stand Alone Mode (1024)</b>	Yes, 2x512 (splitter), 1024, 512 in/out, fine DMX channels ( 16 bits)
<b>Multiple Zone (512)</b>	No, 1 Zone, can play 1 scene per time
<b>Multiple Zone (1024)</b>	Yes, 5 Zones, can play 5 different scenes per time
<b>Stand Alone DMX Merging</b>	Yes, merge several interfaces to play different Zones together
<b>Internal Memory</b>	Yes (4 Mb)
<b>External Memory</b>	Yes, SD card slot included
<b>Memory Capacity</b>	20000 steps with 16 ch., 6000 steps with 512 ch., 3000 steps with 1024 ch.
<b>Real Time Clock - RTC</b>	Yes, Time and calendar triggers (minutes, hours, week, days, month)
<b>Trigger buttons</b>	Yes, 8 buttons with Blue status LED
<b>Option Buttons</b>	Yes, 4 buttons (Mode, Valid, Next, Previous)
<b>Mode Buttons</b>	Yes, Scene and Page selections, Speed, General Dimmer, custom colors
<b>RJ45 Easy I/O connectors</b>	Yes, 3 RJ45 connectors for all In/Out pins and connections
<b>Dry Contact Triggers</b>	Yes (7 contacts port on 3,3V or 5V)
<b>RS232 Triggers</b>	Yes, scene selection, speed, dimmer, zone, black out
<b>Infra-red Receiver</b>	Yes, external IR PCB and IR remote control available in option
<b>Infra-red Options</b>	10 scene selection, scene speed, general dimmer and next scene
<b>Light intensity Triggers</b>	Yes, external PCB with Light sensor available in option
<b>Master/Slave</b>	Yes, synchronize and connect up to 32 interfaces together in stand alone
<b>CPU's technology</b>	32 bits
<b>Dimensions</b>	H : 38mm(1.49in) / W : 166mm(6.54in) / D : 97mm (3.82in)
<b>Weight</b>	0.2 Kgs
<b>Package total weight</b>	0.41 Kgs
<b>Power Input</b>	5V to 24V DC, 0.5A max on DC connectors, 5V, 0.5A via USB
<b>Power / Consummation</b>	0.3 to 0.5W
<b>High Voltage Protection</b>	Yes
<b>Housing</b>	Black with 4 mounting holes, ABS Plastic
<b>IP rating</b>	IP40
<b>Place of Use</b>	Indoor
<b>Storage</b>	Keep in dry place
<b>Compatibility</b>	8 and 16 bits DMX fixtures
<b>Operating Temperature</b>	- 25 to +70 C°
<b>Certifications</b>	CE, RoHS, Fcc
<b>International Warranty</b>	Yes, 3 years

### Software features:

<b>LED Player</b>	512/1024 channels DMX + Stand Alone mode, Live Board mode
<b>Studio DMX 3D viewer</b>	Mode Full
<b>Pro DMX</b>	Yes, 1024 channels, full mode, 30 minute loop of Audio and Video Timeline
<b>Art-Net output from PC</b>	Yes, 1 or 2 Universes (DMX + Artnet)
<b>Wi-Light 2016 App</b>	Yes, can control LED Player and Pro DMX with a WIFI connection
<b>System Compatibility</b>	Windows, MAC Os X (10.6 and higher) and Linux (64 Bits)
<b>Free software updates</b>	Yes

Package Content: 1 USB cable + 1 USB to DMX Interface (3 Pin XLR, 5 pins in option)



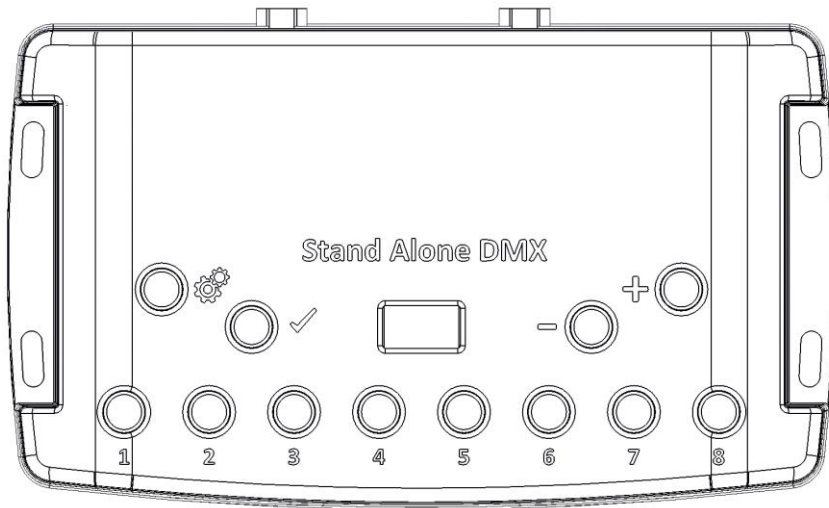

## FRONT FACE OF THE 512 / 1024 CHANNELS INTERFACES



### Scene triggering buttons:

- 1: Scene 1 On/Off
- 2: Scene 2 On/Off
- 3: Scene 3 On/Off
- 4: Scene 4 On/Off
- 5: Scene 5 On/Off
- 6: Scene 6 On/Off
- 7: Scene 7 On/Off
- 8: Scene 8 On/Off

### Command buttons:


-  : Mode selection (Trigger, Page, Color, Speed, Dimmer, Zone)
-  : Valid Choice / Color Off
-  : Decrease values
-  : Increase values

### Display:

7-segments LED display

## SIDE FACES OF THE 512 / 1024 CHANNELS INTERFACES


Left Side

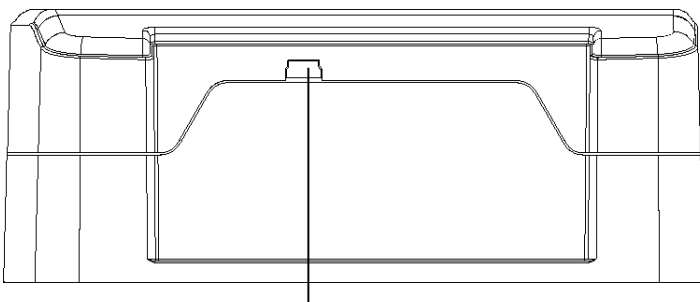

### Mini USB connector and USB power connector

5 DC Volts only; 0,15-1 A.

Right Side

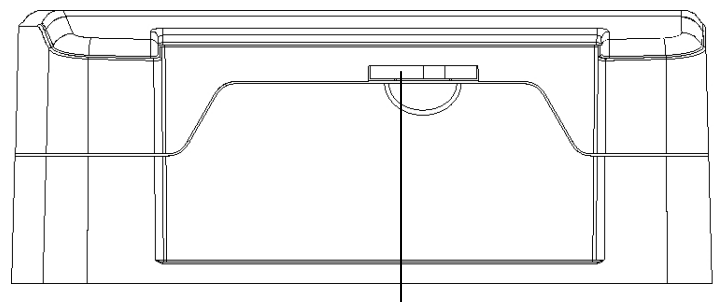

### Micro SD Port

## TOP FACE OF THE 512 / 1024 CHANNELS INTERFACES

### RJ 45 connector TRIG

- 1 : 5 Volts out
- 2 : Trig 1
- 3 : Trig 2
- 4 : Trig 3
- 5 : Trig 4
- 6 : Trig 5
- 7 : Trig 6
- 8 : Trig 7

### RJ 45 connector Input/Output


- 1 : Master/Slave - Clock
- 2 : Master/Slave - Data
- 3 : Light - Data
- 4 : IR Signal from the external IR LED receiver
- 5 : RS232 Tx
- 6 : RS232 Rx
- 7 : 5 Volts out
- 8 : Ground

### Power supply 9V input

DC Connector

### RJ 45 Pins Order

8 7 6 5 4 3 2 1

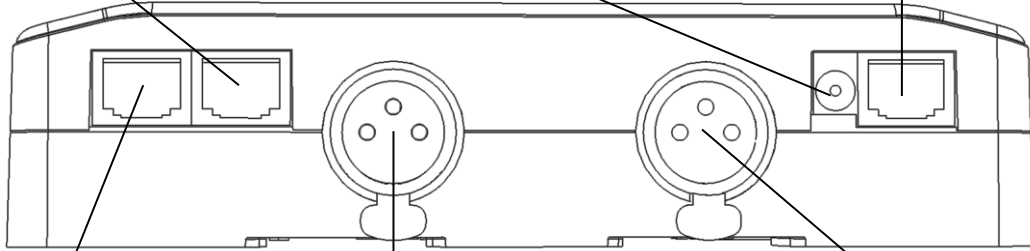

### RJ45 connector Input/Output

- 1 : Master/Slave - Clock
- 2 : Master/Slave - Data
- 3 : Light - Data
- 4 : IR Signal from the external IR LED receiver
- 5 : RS232 Tx
- 6 : RS232 Rx
- 7 : 5 Volts out
- 8 : Ground


### XLR DMX Signal Connector A

- 3 Pins. Can be configured in Output or Input mode (PC mode only).
- 1: Ground
  - 2: Data -
  - 3: Data +

### XLR DMX Signal Connector B

- 3 Pins. Can be configured in Output mode (splitter for 512 interface or output for 1024) or Input mode (PC for 512, PC and Stand Alone for 1024).
- 1: Ground
  - 2: Data -
  - 3: Data +

### **Mode selection button**

Press the Button  to select one of the available mode : Scene triggers (SA), Page (PA), Color (Co), Speed (SP), Dimmer mode (dl) or zone (Zo).

### **Valid Button**

Press the button  to validate your choice or turn off the current color selection.

### **Next/Previous, +/- Scene buttons**

**Scene trigger mode:** Select the scene number with + or – buttons, then press Valid to confirm to play the selected scene from 01 to 255. The scene number will flash several time to confirm your selection.

With scene 00 nothing is playing

**Page Mode:** Select the scene page with + or – buttons from P0 to P9, then choose the scene available in the current page with the 8 buttons.

**Color mode:** From the 8 buttons, select one of the 8 customized color or choose the color of the color wheel from 00 to 99 with + or – buttons. Press Valid button to turn off the current color or recall the last color from the color wheel.

**Speed Mode:** Increase or decrease the Speed of the current scene with + or – buttons. Values are from -9 to +9.

**Dimmer Mode:** Increase or decrease the general intensity (dimmer + RGB) of scenes and colors with + or – buttons. Values are from -9 to +9.

**Zone Mode:** Select the zone with + or – buttons (Zone A to E and global Zone), then choose the scene available in the current zone with the 8 buttons.

### **Blue LED buttons**

Push one of the 8 trigger buttons to play a scenes in memory from the Scene trigger mode and Page mode. Push again the buttons with blue LED to stop the current scene.  
In color mode push a button to trigger a personalized colors. Push again to stop it.

## **LED display operations and meaning :**

The LED Display shows the number of the current scene, page, color, selected modes, speed/dimmer values and the update firmware mode.

There are different displays according to the selected mode:

**PC:** The interface is connected to the computer and communicating with the software. The interface is controlled by software.

**SA:** Scene trigger mode is running. By default then no scene is playing, all DMX channels are set to 0. In Scene trigger mode, the LED display gives the current scene number from 01 to 255. The 00 value is Black-out and the DMX interface send nulls (0x00) on all output.

**PA:** Page mode, it allows to switch between 10 pages of 8 buttons to triggers scenes directly. In page mode, the display indicates the page number P0 to P9.

**Co:** Color mode, to play some customized colors on RGBW channels. In color mode, the display indicates the color number from C1 to C8.

**SP:** Speed mode, increase or decrease the current scene speed. In speed mode, the display indicates the speed of the current scene, values from -9 to 9.

**dl:** Dimmer mode, increase or decrease the general intensity and dimmer of scene and customized colors. In dimmer mode, the display indicates the general intensity, values are from -9 to 9.

**Pr:** Programming memory Mode, Pr is display when the interface is writing a show in memory.

**Zo:** Zone mode is selected. After programmed the interface memory the zone A is selected by default. In zone mode, the LED display gives the current Zone : General, A, B, C, D, E.

Zone A to D display : 

General Zone display : 

The LED Display switch between the current zone and the running scene number every 3 seconds.

**bl:** Update firmware mode, when a new firmware is writing in memory. In update firmware mode, the display will flash during the firmware update. Do not disconnect the interface during this mode.



## INTERNAL CLOCK SETTING

It is possible to setup the internal interface clock and change or update its date and time manually.

To access the clock mode, hold the "+" and "-" buttons for 5 seconds.

"YE" is displayed to configure the current year, then use + and - to select the year and confirm with ✓.

Proceed in the same way for the months "Mo", days "dA", hours "ho" and minutes "Mi" setting.


After validate the minutes, "CL" will flash to confirm and save the new configuration.

Then the device clock is up to date.

This mode is very convenient, especially when you need to update the clock on site directly without computer.

## ZONE MODE (1024 CHANNEL INTERFACES ONLY)

1024 channels interfaces allows to play 5 zones at the same time in stand alone mode.

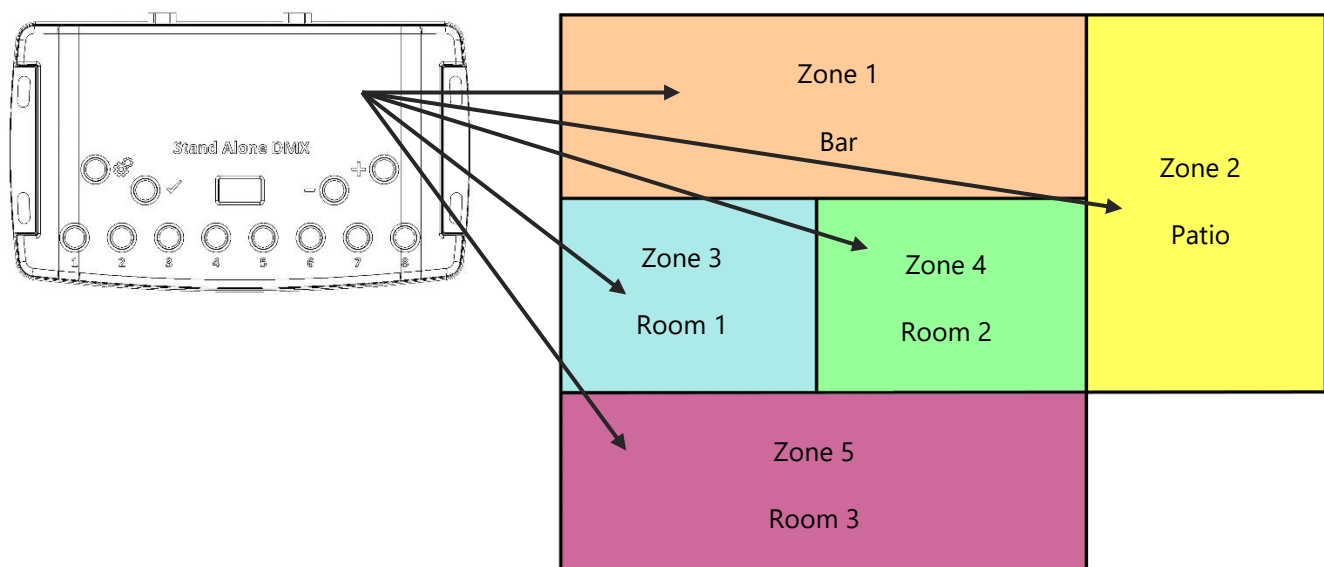

## ZONE CONFIGURATION IN THE SOFTWARE


In the edition mode :

Click on + to add zones


The zone window can be display by clicking on the « Zone » button

In the zone window, move the central bar to define the zone parameters, it is also possible to choose manually the zone range in the fields.


Make sure your DMX Patch and fixtures addresses are corresponding to your Zones.

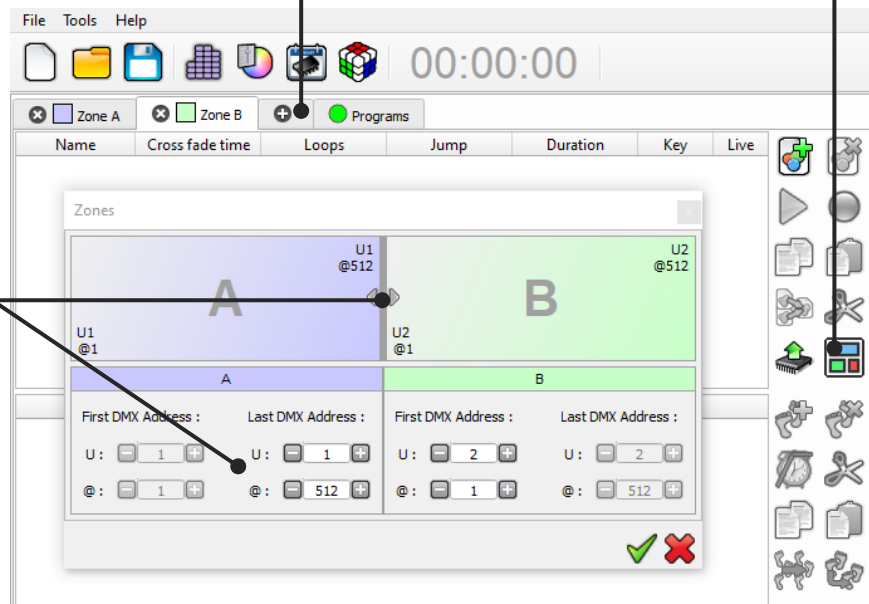

When zones are defines, you need to create scenes in the corresponding tab :

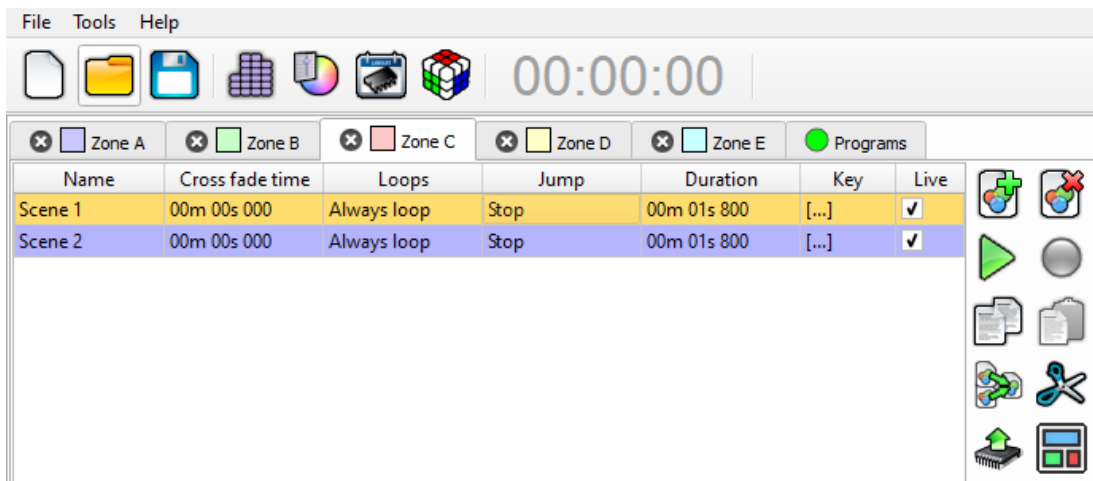

In Stand alone Mode :

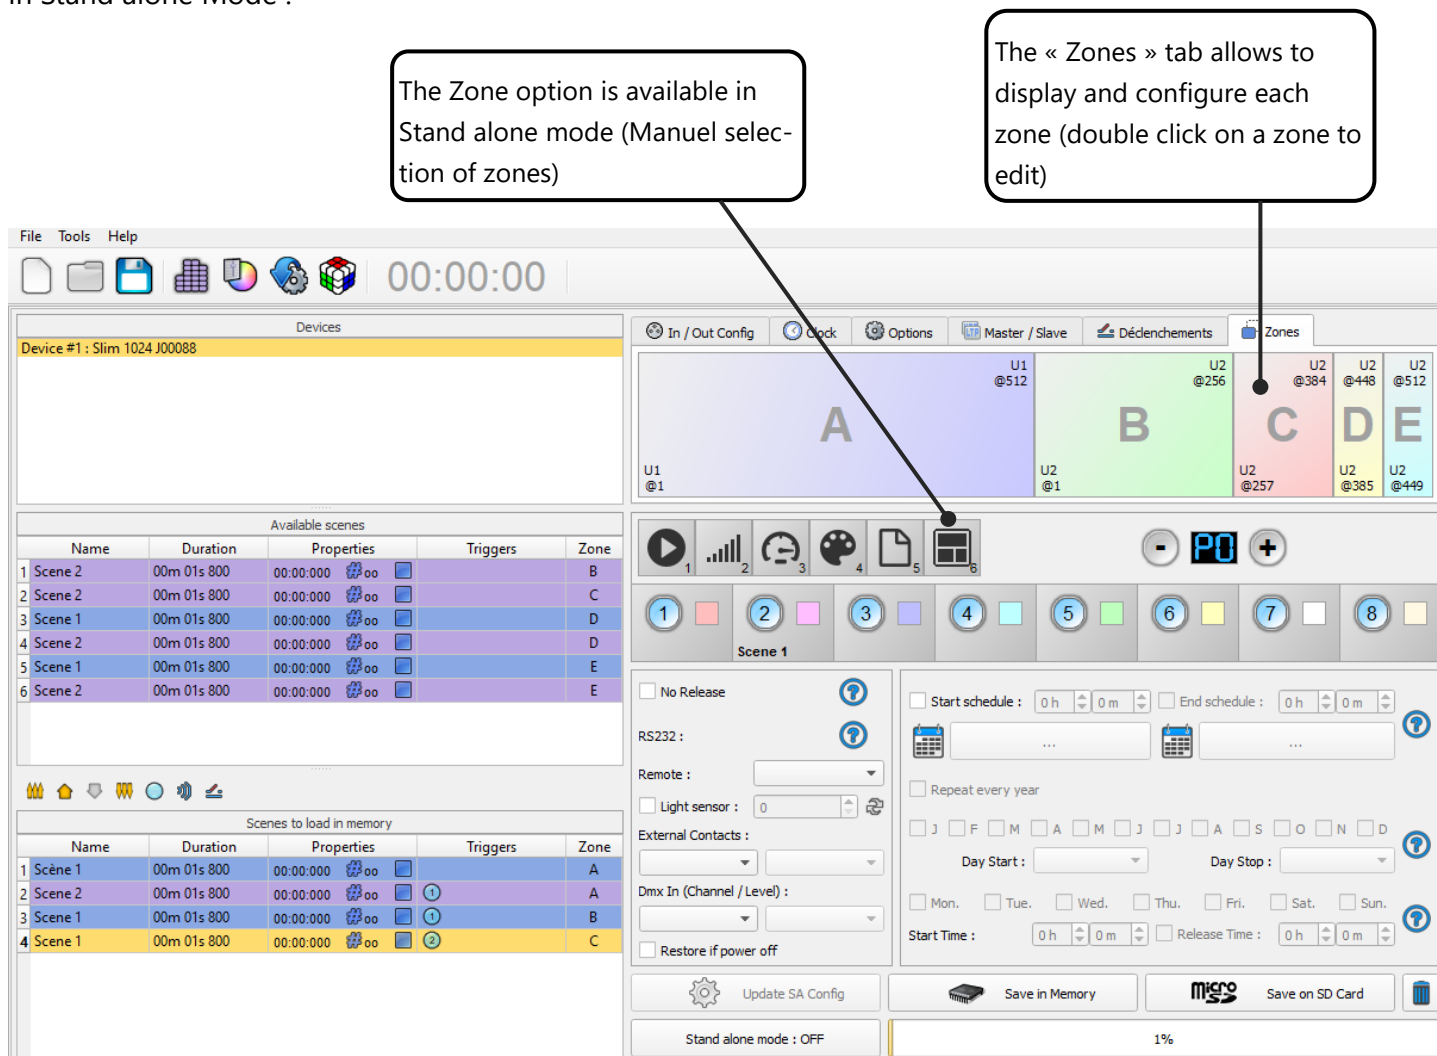


## STAND ALONE INTERFACE TRIGGERS

The Stand Alone mode of the software enable to configure and personalize all the triggers.  
The information will be directly saved in the DMX interface memory with the memory writing function.

## SWITCH TO STAND ALONE MODE

When the device isn't connected to the software or has just been powered, it enters in Stand Alone mode after five (5) seconds.

# INTERFACE MODE SETTINGS

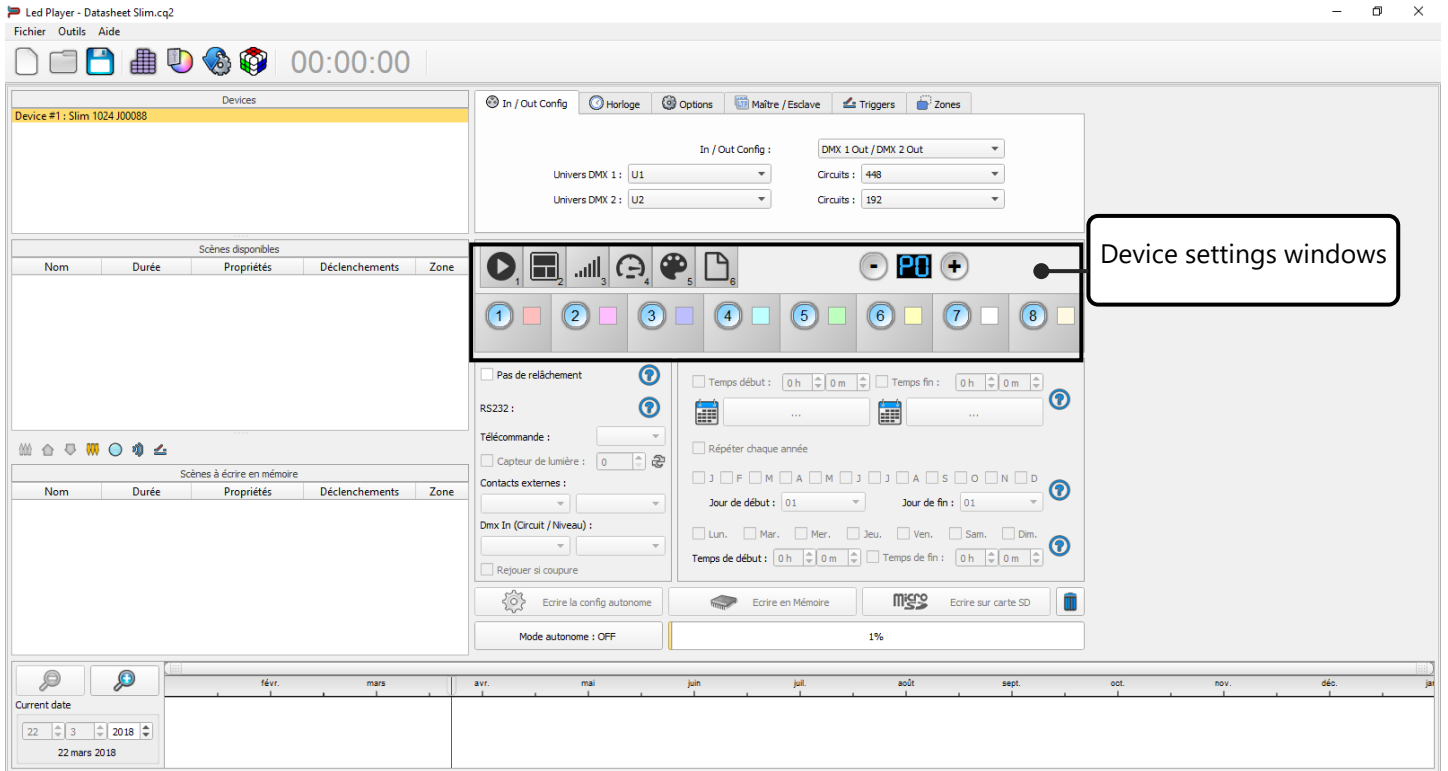

Device settings windows


Organizes menus available in stand-alone mode

Page selection Buttons





Choose a RGBW color to be played in stand alone color mode (8 colors max.)

Associate scenes to buttons to be played in stand alone scene mode (80 scenes max.)


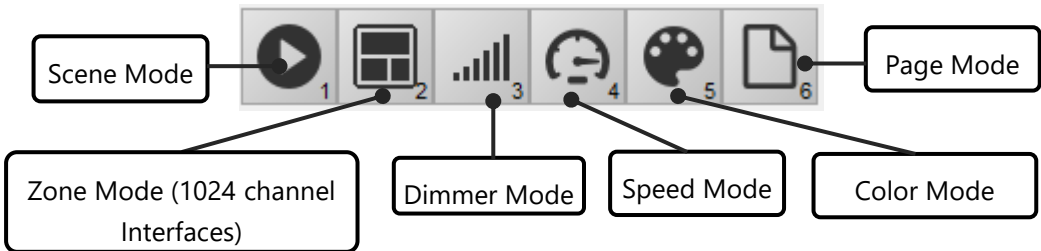


It is possible to personalize the mode that you want to use in Stand Alone.  
 From the mode icons, you can right click to Add or Remove a mode. Drag and drop a mode in the list to order them accordingly to your need.

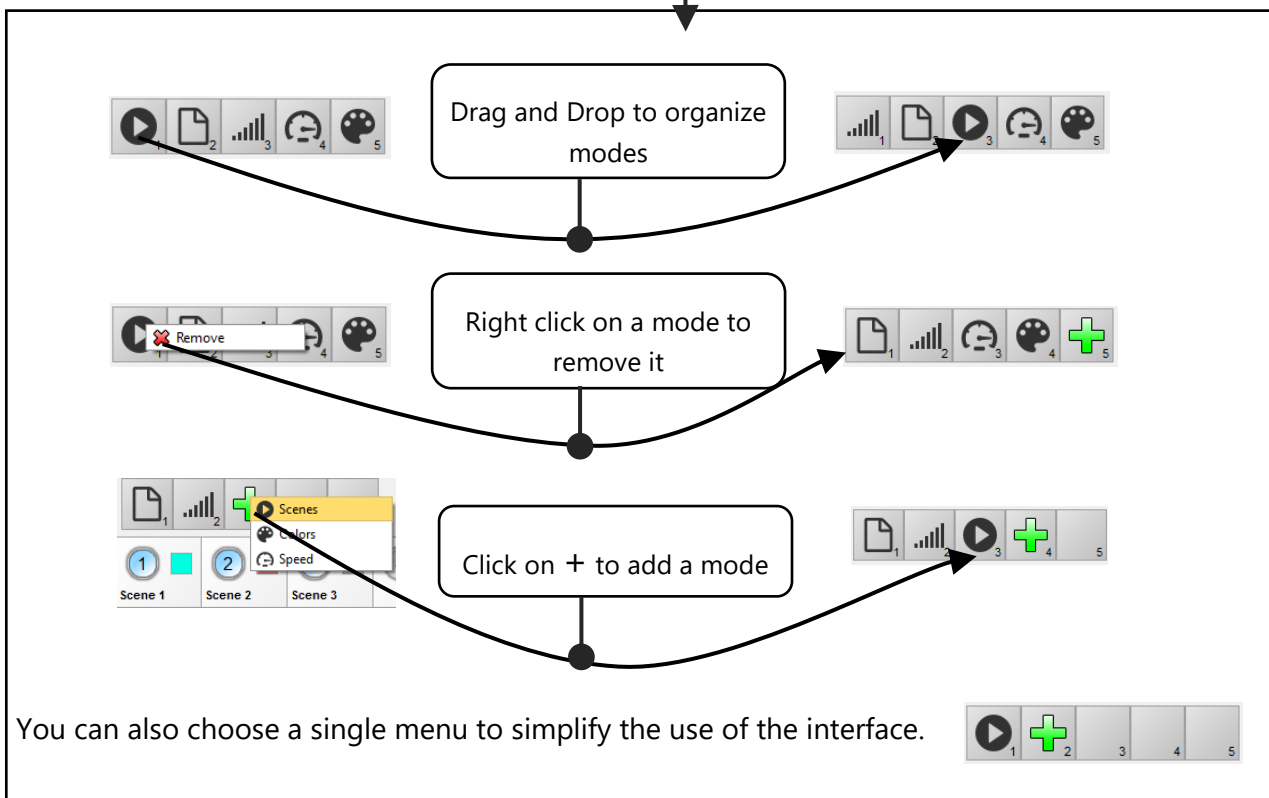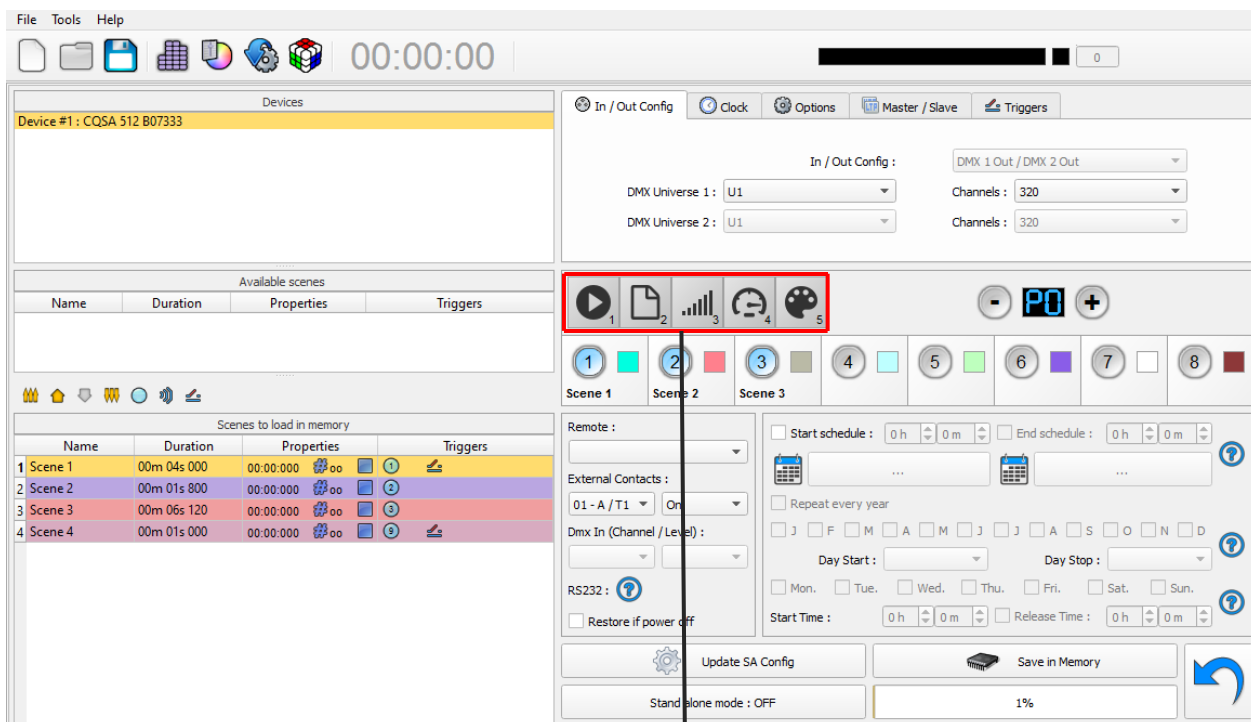


## LED BUTTONS TRIGGER

Standalone mode offers 8 buttons that represents the interface LED buttons. From the scene list of the standalone mode, you need to drag and drop a scene on any button to assign a button number.

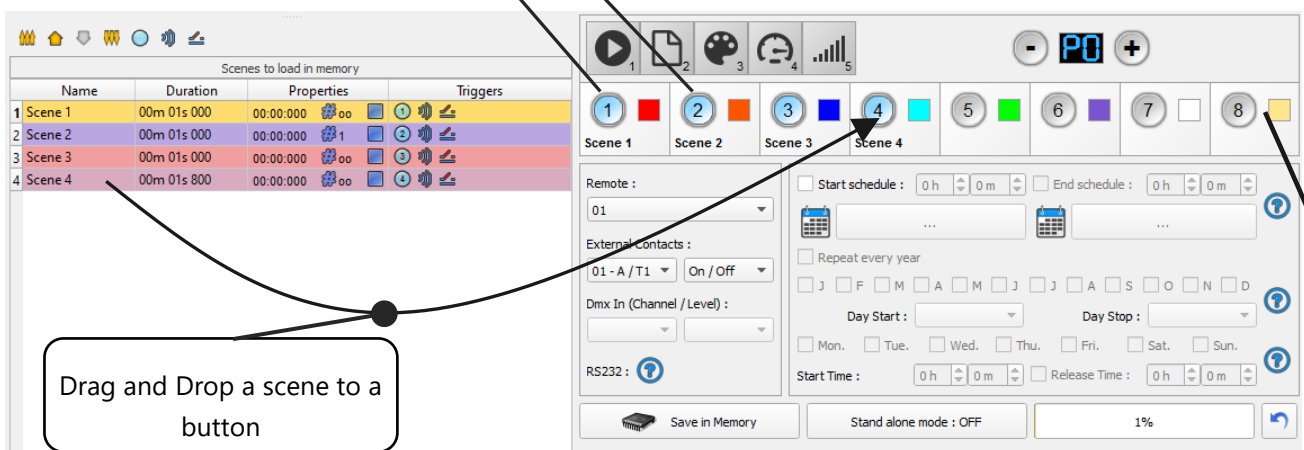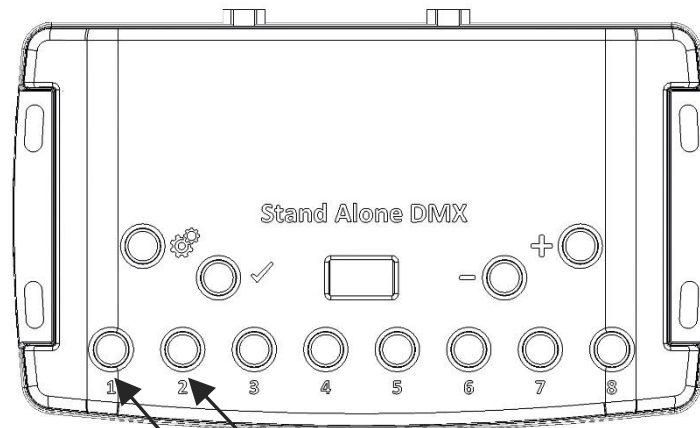

It's possible to replace a scene by another one or to remove it by pulling it out of the list.

You can also setup a color to each button and play this color in the color mode, click on color square to set your own color.

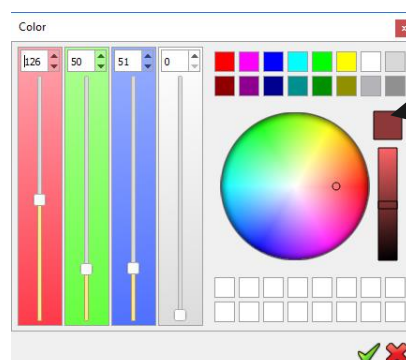


## CONTACT WIRING AND CONNECTIONS WITH RJ45 PINS

The 7 external contacts are located on the RJ45 connector number 2. You can use the 7 dry contacts to trigger 7 scenes via external relay. To have more triggers you must use a multiplexed system to get a maximum of 127 contacts as following:

Multiplex the trigger could give 127 triggers combinations




**External Contact Closures can be done only when Pin 2, 3, 4, 5, 6, 7, 8 are connected to Pin 1 (5 V. DC). (up to 127 triggers)**

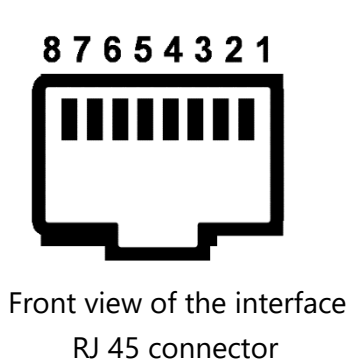

Pin Table:


Trigger 01 = Pin 2  
 Trigger 02 = Pin 3  
 Trigger 03 = Pin 2 + 3  
 Trigger 04 = Pin 4  
 Trigger 05 = Pin 2 + 4  
 Trigger 06 = Pin 3 + 4  
 Trigger 07 = Pin 2 + 3 + 4

Trigger 08 = Pin 5  
 Trigger 09 = Pin 2 + 5  
 Trigger 10 = Pin 3 + 5  
 Trigger 16 = Pin 6  
 Trigger 32 = Pin 7  
 Trigger 48 = Pin 6 + 7  
 Trigger 64 = Pin 8  
 Trigger 100 = Pin 4 + 7 + 8  
 Etc...

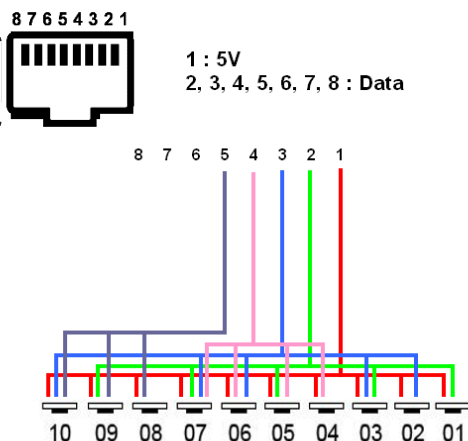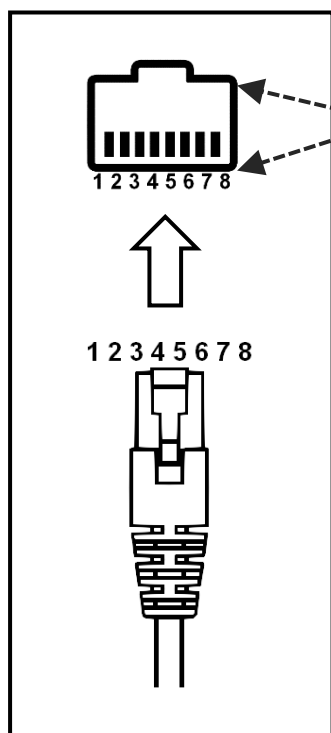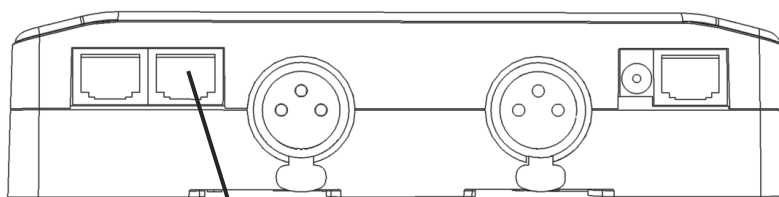

Dry contact reaction time : 8 ms (0.008 s) / Time between 2 contacts : 500 ms (0.5 s)


Dry contact trigger options : On (Start scene only) + On/Off (start and stop scene) + Auto release (Hold contact to play scenes) + Restart (restart scene from beginning) + Play in priority (Scene keep playing until it pause or stop, no other triggers allowed while playing).

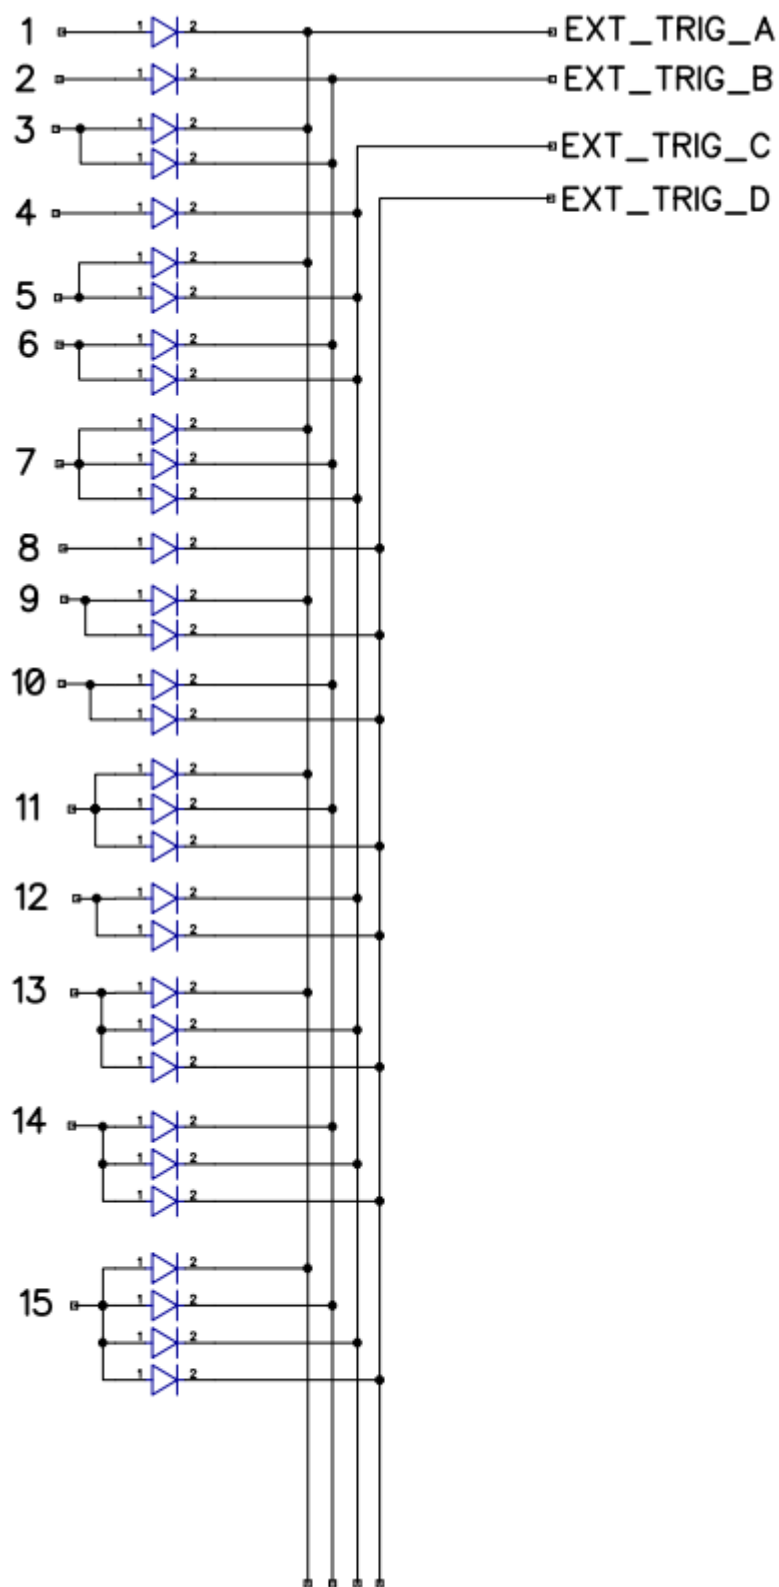



By selecting a scene in the list, it's possible to choose the external contact number (from 01 to 127) to trigger the scene.

By default, the interface gives 7 external contacts (01, 02, 04, 08, 16, 32, 64). To obtain 127 external contacts, you have to use a de-multiplexing interface in order to go use the other possible combinations.

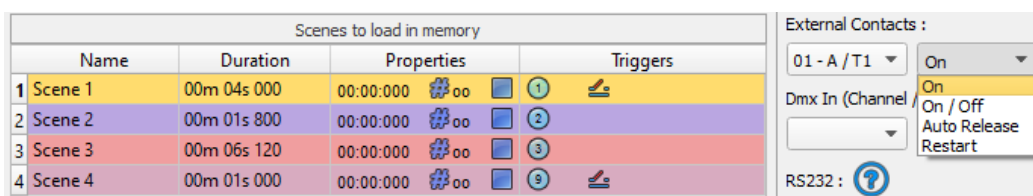

Several trigger options are available for externals contacts triggers:

**On :** Activate the contact only allow you to play the scene.

**On/Off :** Activate the contact allow you to play and stop a scene. Each trigger action will invert the state of the scene (start/stop).


**Auto Release:** The scene plays while the contact is activated. Keep the contact activated to play the scene, when the contact is released the scene stop.


**Restart :** Activate the contact will restart the scene from its beginning automatically. If the scene is off already, then it will play.

## TRIGGERING COMMANDS

External contacts can also trigger commands in stand alone mode. >From the Triggers tab you can select a contact for each action : Dimmer + , Dimmer -, Blackout, Speed +, Speed -, Pause, Scene +, Scene - and Area.

It is not possible to use the same trigger for scene and command, in this case, the scene contact has the priority or the scene will loose its contact trigger information after choose the contact from the Trigger command tab.

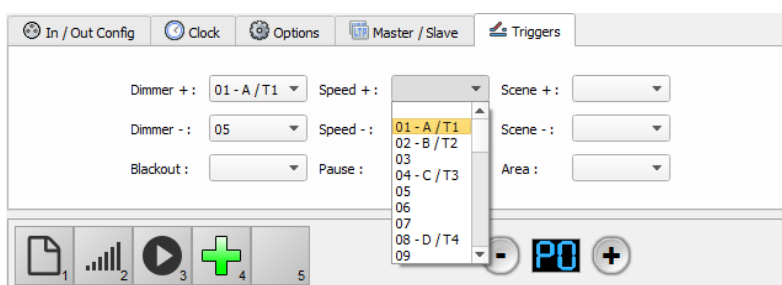

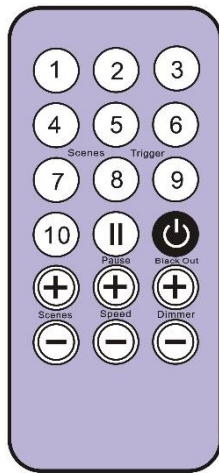

Button 1 to 10 must be assigned to a scene via the software.

Each button can trigger a different scene. With the remote control, a scene cannot be stop directly with the assigned button. To stop it you must press the Stop/Black Out button or trigger another scene.


**Pause button** to freeze the current scene to its actual state.

**Stop/Black Out** button to stop the current scene and play the empty scene number 00. All DMX channels are set down to 00 levels.

**+/- for scene trigger.** Select the next or previous scene automatically. You don't need to hold the button to validate and play a scene. The next or previous scene will play directly after selected.

**+/- for Scene speed.** Increase or decrease the speed of the current scene. A different speed can be chosen separately for each scene.


**+/- for General dimmer.** Increase or decrease the RGB, CMY and dimmer channels of the fixtures. The CMY, RGB, Dimmer channels are defined in the Profile of the fixture.

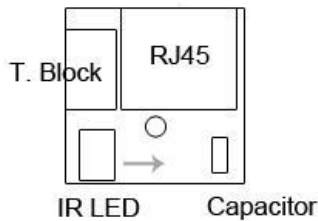

To use the IR remote control, an external PCB with an IR receiver LED must be connected before to the RJ45 #1 of the Stand Alone interface. The standard RJ45 cable distance is about 20 meters maximum.


**IR PCB Pin assignment:**

- With RJ45 use pins **#8** = Ground; **#4** = IR Data ; **#7** = 5V DC.
- With T. Block use pins: **O** = IR Data; **V** = 5V DC; **G** = Ground.

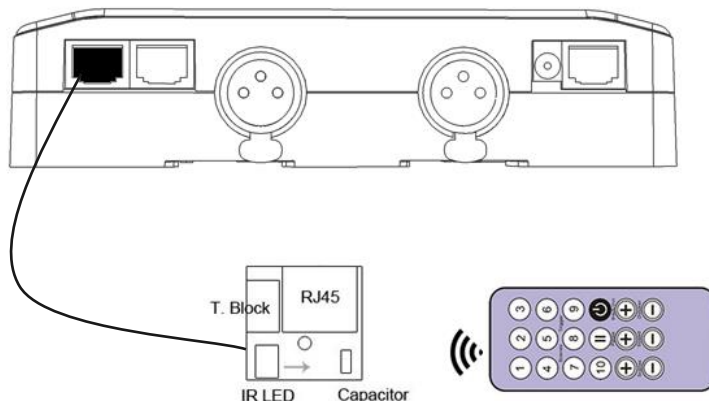


In the software go to Stand Alone Mode and use the Triggers options to assign a remote button to a scene. Standalone mode offers up to 10 triggers with the Infrared remote.

By selecting a scene in the list, it's possible to choose the remote button number (from 01 to 10) to trigger the scene.

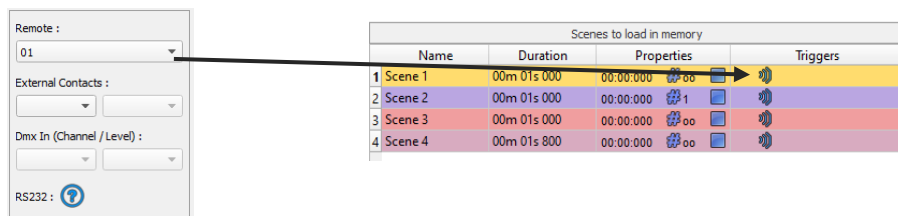


## DMX IN TRIGGER CONNECTION

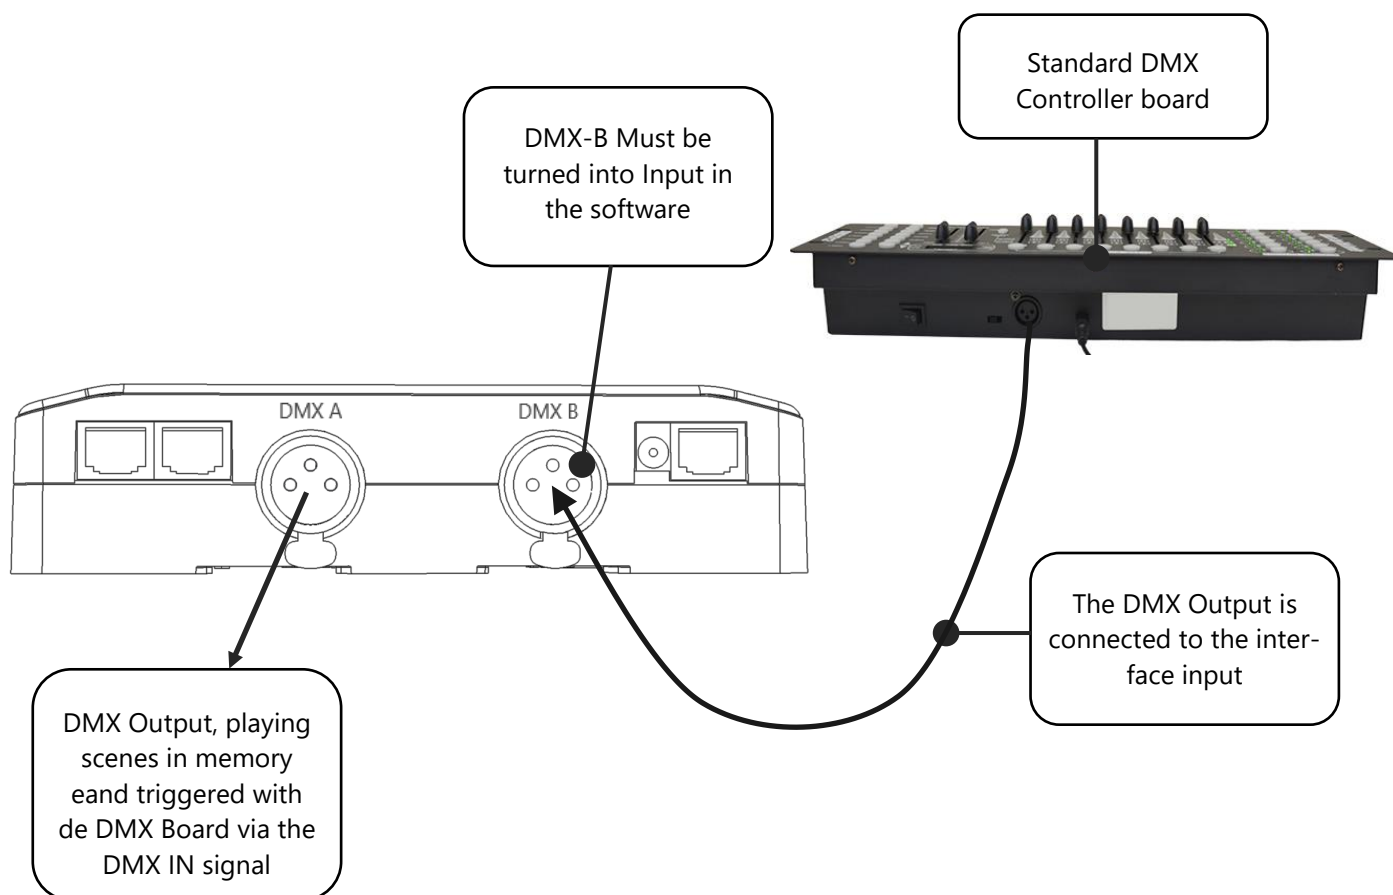

## DMX IN TRIGGERS VIA ANOTHER DMX SIGNAL IN STANDALONE

DMX in trigger in stand Alone available only with 1024 interfaces.

In stand alone window set In / Out Config as DMX 1 Out/DMX 2 In and select the DMX Out universe

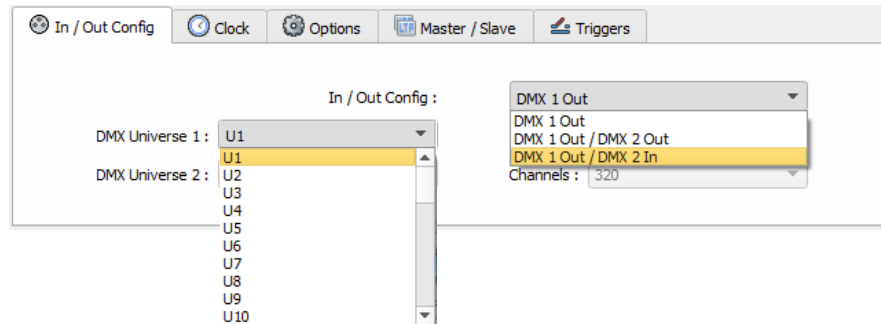


The Stand Alone mode offers up to 512 DMX IN channel triggers and up to 255 DMX trigger values per channel. By selecting a scene in the list, it's possible to choose the channel number and the DMX value to trigger the scene. The scene will play when the value of the DMX channel is reached or exceeded.



## SETUP DMX IN MODE IN SOFTWARE USE

In software one DMX Output must be turned into an input in the Options windows. To access this window click on the software menu: Tools > Options then click to select the device section as following:

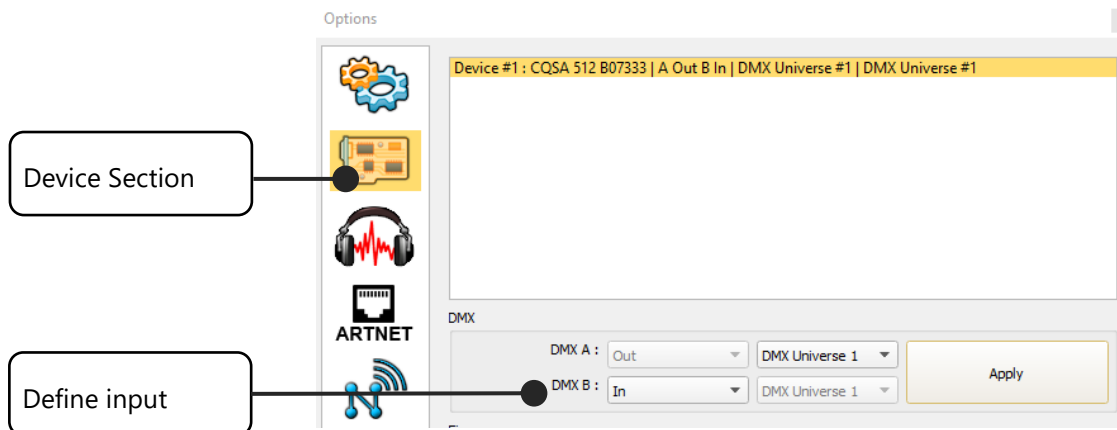


You can select an universe for output and input mode with 1024 and 512 interfaces.

Follow those steps to set a DMX-IN trigger on a scene or on a program:

**Step 1:** Go to the scenes list in the editor view.

**Step 2:** Double click the "Key" cell of the scene to be triggered.

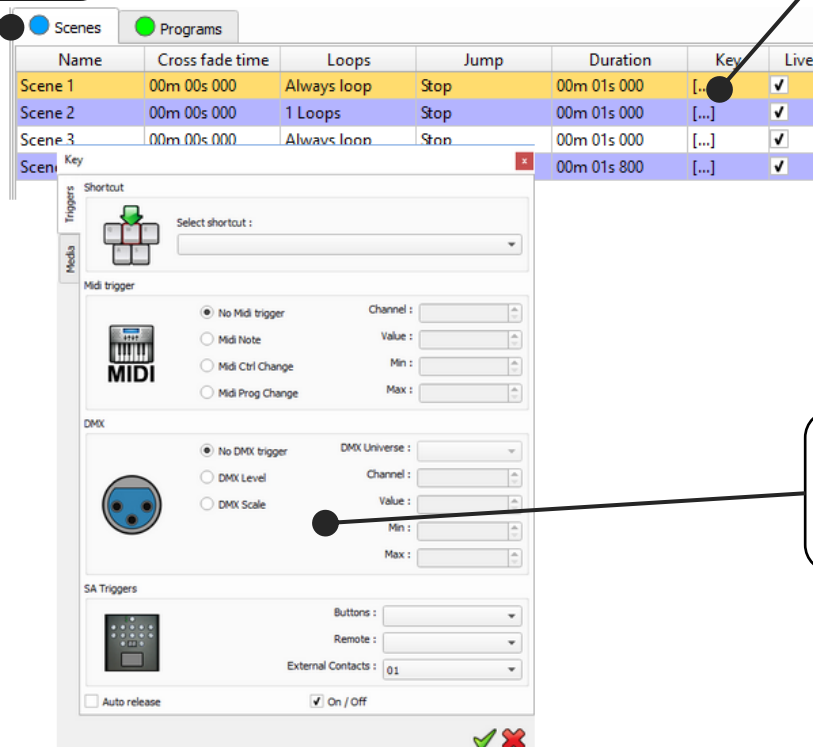

**Step 3:** Go to the DMX section of the Key window.

Two DMX-IN trigger options are available: DMX Level and DMX Scale, let's see what the differences are:

### Option DMX Level

DMX

No DMX trigger

DMX Level

DMX Scale

DMX Universe : DMX Universe 1

Channel : 1

Value : 127

Min :

Max :

Choose the input universe and channel

Choose the trigger level with one if you go over it the scene starts and under it the scene stops.

### Option DMX Scale

DMX

No DMX trigger

DMX Level

DMX Scale

DMX Universe : DMX Universe 1

Channel : 1

Value :


Min : 80

Max : 150

Choose the input universe and channel


Choose the trigger range of levels. With one if you go inside it the scene starts and outside it, the scene stops.

With the DMX Scale you can create many triggers presets on a same DMX-IN channel and so starts a suite of scenes on the DMX fader way.

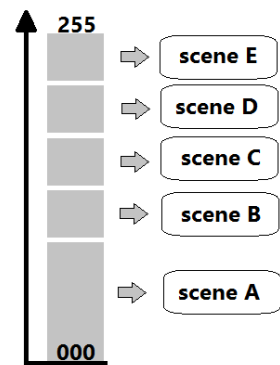

## RS232 TRIGGERS IN STAND ALONE

Standalone mode allows to use the RS232 protocol to control the DMX interface with the commands describe in the help topic

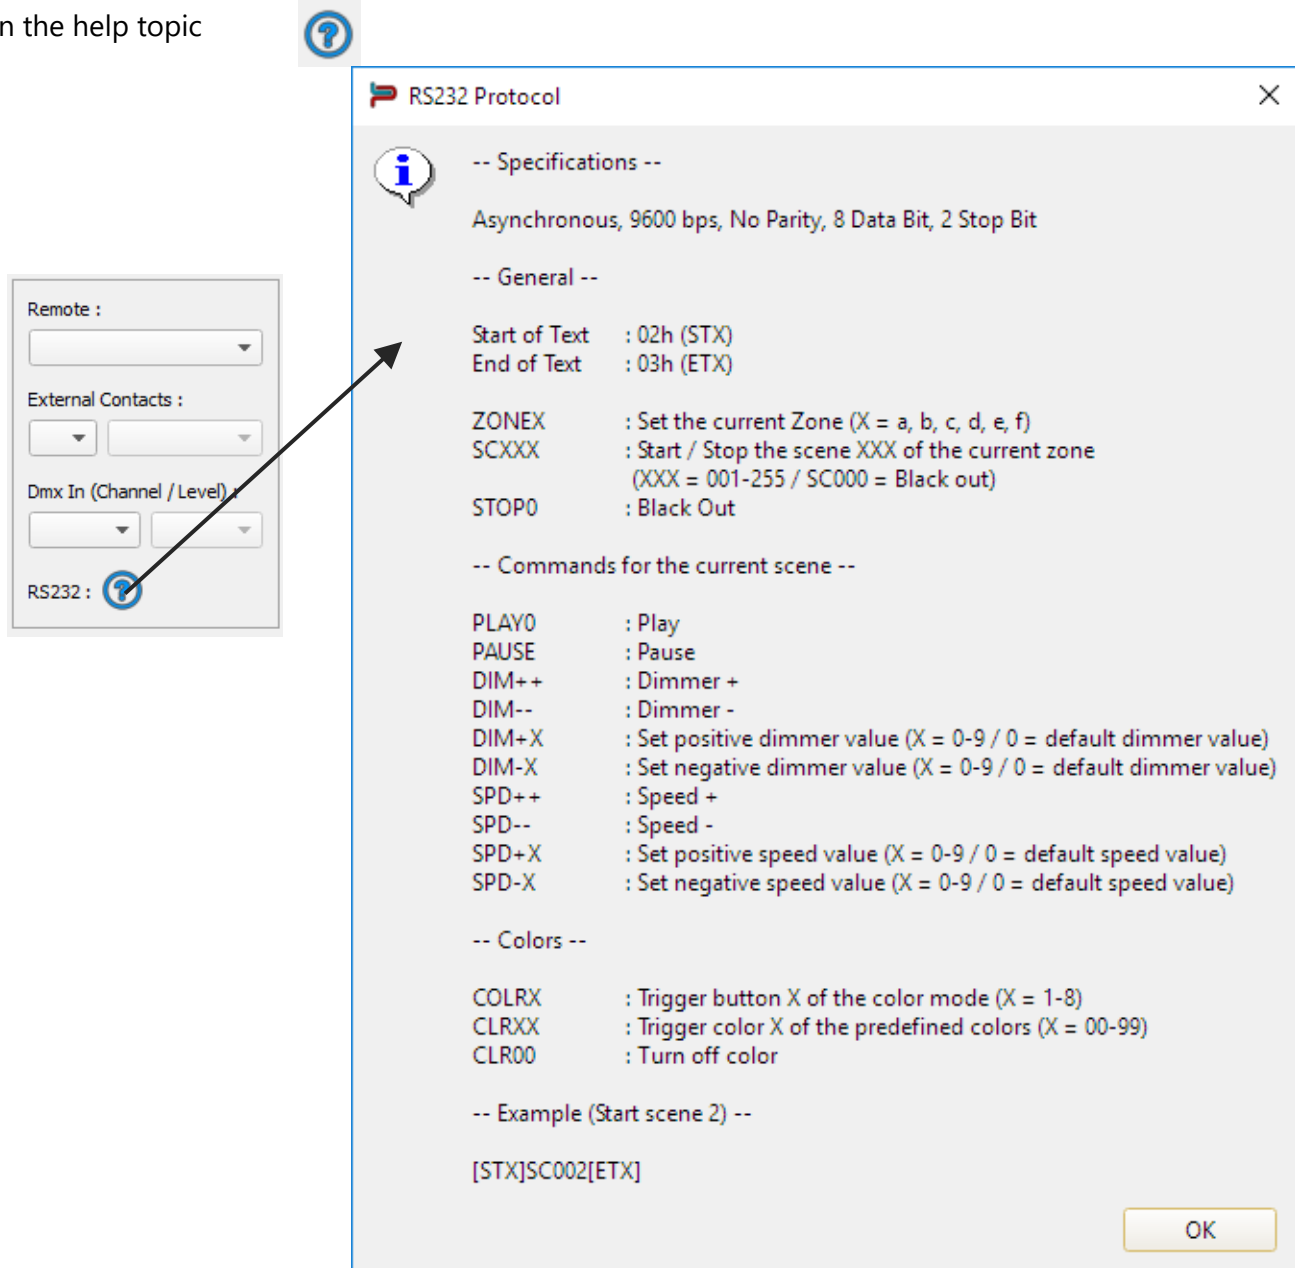

The image shows a control panel on the left with several dropdown menus: 'Remote', 'External Contacts', and 'Dmx In (Channel / Level)'. Below these is an 'RS232' option with a question mark icon. An arrow points from this icon to a larger 'RS232 Protocol' help dialog box on the right. The dialog box contains the following text:

**RS232 Protocol**

-- Specifications --  
Asynchronous, 9600 bps, No Parity, 8 Data Bit, 2 Stop Bit

-- General --  
Start of Text : 02h (STX)  
End of Text : 03h (ETX)

ZONEX : Set the current Zone (X = a, b, c, d, e, f)  
SCXXX : Start / Stop the scene XXX of the current zone  
(XXX = 001-255 / SC000 = Black out)  
STOP0 : Black Out

-- Commands for the current scene --

PLAY0 : Play  
PAUSE : Pause  
DIM++ : Dimmer +  
DIM-- : Dimmer -  
DIM+X : Set positive dimmer value (X = 0-9 / 0 = default dimmer value)  
DIM-X : Set negative dimmer value (X = 0-9 / 0 = default dimmer value)  
SPD++ : Speed +  
SPD-- : Speed -  
SPD+X : Set positive speed value (X = 0-9 / 0 = default speed value)  
SPD-X : Set negative speed value (X = 0-9 / 0 = default speed value)

-- Colors --

COLRX : Trigger button X of the color mode (X = 1-8)  
CLRXX : Trigger color X of the predefined colors (X = 00-99)  
CLR00 : Turn off color

-- Example (Start scene 2) --  
[STX]SC002[ETX]

OK

Connect the RS232 transmitter to the interface RS232 and GND pins and send the dedicated ASCII commands lines that you need.

The ASCII commands need to be send one time only to be processed by the interface.

# ASCII TABLE

Decimal	Hexadecimal	Binary	Octal	Char	Decimal	Hexadecimal	Binary	Octal	Char	Decimal	Hexadecimal	Binary	Octal	Char
0	0	0	0	[NULL]	48	30	110000	60	0	96	60	1100000	140	`
1	1	1	1	[START OF HEADING]	49	31	110001	61	1	97	61	1100001	141	a
2	2	10	2	[START OF TEXT]	50	32	110010	62	2	98	62	1100010	142	b
3	3	11	3	[END OF TEXT]	51	33	110011	63	3	99	63	1100011	143	c
4	4	100	4	[END OF TRANSMISSION]	52	34	110100	64	4	100	64	1100100	144	d
5	5	101	5	[ENQUIRY]	53	35	110101	65	5	101	65	1100101	145	e
6	6	110	6	[ACKNOWLEDGE]	54	36	110110	66	6	102	66	1100110	146	f
7	7	111	7	[BELL]	55	37	110111	67	7	103	67	1100111	147	g
8	8	1000	10	[BACKSPACE]	56	38	111000	70	8	104	68	1101000	150	h
9	9	1001	11	[HORIZONTAL TAB]	57	39	111001	71	9	105	69	1101001	151	i
10	A	1010	12	[LINE FEED]	58	3A	111010	72	:	106	6A	1101010	152	j
11	B	1011	13	[VERTICAL TAB]	59	3B	111011	73	:	107	6B	1101011	153	k
12	C	1100	14	[FORM FEED]	60	3C	111100	74	<	108	6C	1101100	154	l
13	D	1101	15	[CARRIAGE RETURN]	61	3D	111101	75	=	109	6D	1101101	155	m
14	E	1110	16	[SHIFT OUT]	62	3E	111110	76	>	110	6E	1101110	156	n
15	F	1111	17	[SHIFT IN]	63	3F	111111	77	?	111	6F	1101111	157	o
16	10	10000	20	[DATA LINK ESCAPE]	64	40	1000000	100	@	112	70	1110000	160	p
17	11	10001	21	[DEVICE CONTROL 1]	65	41	1000001	101	A	113	71	1110001	161	q
18	12	10010	22	[DEVICE CONTROL 2]	66	42	1000010	102	B	114	72	1110010	162	r
19	13	10011	23	[DEVICE CONTROL 3]	67	43	1000011	103	C	115	73	1110011	163	s
20	14	10100	24	[DEVICE CONTROL 4]	68	44	1000100	104	D	116	74	1110100	164	t
21	15	10101	25	[NEGATIVE ACKNOWLEDGE]	69	45	1000101	105	E	117	75	1110101	165	u
22	16	10110	26	[SYNCHRONOUS IDLE]	70	46	1000110	106	F	118	76	1110110	166	v
23	17	10111	27	[ENG OF TRANS. BLOCK]	71	47	1000111	107	G	119	77	1110111	167	w
24	18	11000	30	[CANCEL]	72	48	1001000	110	H	120	78	1111000	170	x
25	19	11001	31	[END OF MEDIUM]	73	49	1001001	111	I	121	79	1111001	171	y
26	1A	11010	32	[SUBSTITUTE]	74	4A	1001010	112	J	122	7A	1111010	172	z
27	1B	11011	33	[ESCAPE]	75	4B	1001011	113	K	123	7B	1111011	173	{
28	1C	11100	34	[FILE SEPARATOR]	76	4C	1001100	114	L	124	7C	1111100	174	
29	1D	11101	35	[GROUP SEPARATOR]	77	4D	1001101	115	M	125	7D	1111101	175	}
30	1E	11110	36	[RECORD SEPARATOR]	78	4E	1001110	116	N	126	7E	1111110	176	~
31	1F	11111	37	[UNIT SEPARATOR]	79	4F	1001111	117	O	127	7F	1111111	177	[DEL]
32	20	100000	40	[SPACE]	80	50	1010000	120	P					
33	21	100001	41	!	81	51	1010001	121	Q					
34	22	100010	42	"	82	52	1010010	122	R					
35	23	100011	43	#	83	53	1010011	123	S					
36	24	100100	44	\$	84	54	1010100	124	T					
37	25	100101	45	%	85	55	1010101	125	U					
38	26	100110	46	&	86	56	1010110	126	V					
39	27	100111	47	'	87	57	1010111	127	W					
40	28	101000	50	(	88	58	1011000	130	X					
41	29	101001	51	)	89	59	1011001	131	Y					
42	2A	101010	52	*	90	5A	1011010	132	Z					
43	2B	101011	53	+	91	5B	1011011	133	[					
44	2C	101100	54	,	92	5C	1011100	134	\					
45	2D	101101	55	-	93	5D	1011101	135	]					
46	2E	101110	56	.	94	5E	1011110	136	^					
47	2F	101111	57	/	95	5F	1011111	137	_					




## TIME TRIGGERS WITH CLOCK AND CALENDAR

The Stand Alone mode has an internal clock and a calendar. It's possible to assign a time trigger on every scene of the list. By selecting a scene on the list, it's possible to choose the start and end dates and hours and days of the week. You can thus create a lot of scenarios.


### CASE 1: Programming an unique trigger:

- **Start schedule:**

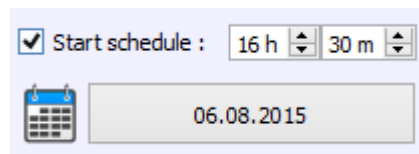

The scene is triggered a single time at the given date and time.


- **End schedule:**

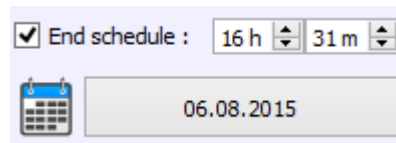

The scene is stopped at the given date and time.


### CASE 2: Programming a repeating trigger:

- **Start schedule:**

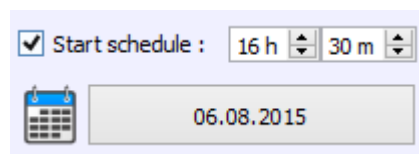


Date from which-one the scene will be playable according to the programmed triggers

- **End schedule:**

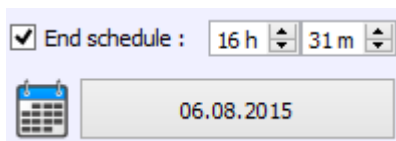

Date after witch-one triggers will be ignored. With no End date, triggers are permanent

- **List of the months of the year**

A horizontal row of 12 checkboxes, each followed by a month abbreviation: J, F, M, A, M, J, J, A, S, O, N, D. The checkboxes for J, M, M, J, A, S, N are checked, while F, A, J, J, O, D are unchecked.


The 12 check boxes represents the 12 months of the year (J) January to (D) December. The triggers will be performed on the activated months. Next, a daily hours range must be defined.

- **Start and Stop days**

Two dropdown menus. The first is labeled 'Day Start : 01' and the second is labeled 'Day Stop : 15'.

With a monthly repetition, you can choose the starting and stoping days for each chosen month. In this example triggers can happen between the 1<sup>st</sup> and the 15<sup>th</sup> of each chosen month.

- **List of the days of the week**

A horizontal row of 7 checkboxes, each followed by a day abbreviation: Mon., Tue., Wed., Thu., Fri., Sat., Sun. All checkboxes are checked.


The 7 check boxes represents the 7 days in a week. The triggers will be performed on the activated days only. Next, a time range must be defined.

A label 'Start Time :' followed by two spinners. The first spinner is set to '11 h' and the second to '30 m'.

- **Start time**

The starting time is the time when the scene will be triggered for each chosen day. Of course chosen months, start and end schedule days are included.

- **Release time**

A label 'Release Time :' with a checked checkbox, followed by two spinners. The first spinner is set to '18 h' and the second to '0 m'.

The release time is the time when the scene will stop for each chosen day. Of course chosen months, start and end schedule days are included. The release time is not mandatory, if it's not defined, the scene will keep playing until another trigger event happens. (Like the triggering of another scene for example).

**NOTE:** For a daily repetition, if the the starting time is later than the release time then the triggering will stopped the next day, even if the next day has not been selected.

## SAVE AND RECOVER THE LAST SCENE AFTER THE POWER CUT OFF:

The interface can save the last scene played before the power cut off and recover it when the power is restored.

For each scene you can select "Restore if power off"

Scenes to load in memory			
Name	Duration	Properties	Triggers
1 Scene 1	00m 04s 000	00:00:000 #oo	①
2 Scene 2	00m 01s 800	00:00:000 #oo	②
3 Scene 3	00m 06s 120	00:00:000 #oo	③
4 Scene 4	00m 01s 000	00:00:000 #oo	④

Click for enable the Restoration option

Remote :  
External Contacts :  
01 - A / T1 On  
Dmx In (Channel / Level) :  
RS232 :  
 Restore if power off

## SCENE TRIGGER PRIORITIES:

When several scenes have the same time trigger (date + hour + minute), only the first scene in the list will be triggered. The rest will be ignored

## PLAY IN PRIORITY



Click to enable the Play in priority option :  
The scene will keep playing. No other triggerings allowed (contacts, Infrared, DMX, RS232) while the scene is playing (except Time/calendar schedules and buttons)

RS232 :  
Remote :  
External Contacts :  
Dmx In (Channel / Level) :  
 Restore if power off  
 Play in priority

## DMX MERGING IN STANDALONE

One DMX line must be turned into an input to capture the dmx signal provided by an external DMX board or by another DMX interface.

The interface will merge the incoming signal with its own output signal by comparing the DMX levels with a HTP filter (priority on the highest levels of the signals). Merging is a solution to keep manual control on channels, using a DMX Board for example. It's also a way to create a multi-zones system by merging several interfaces on one final DMX line. In this last case, each interface can play a scene dedicated to the fixtures at the same time and on the same DMX line.





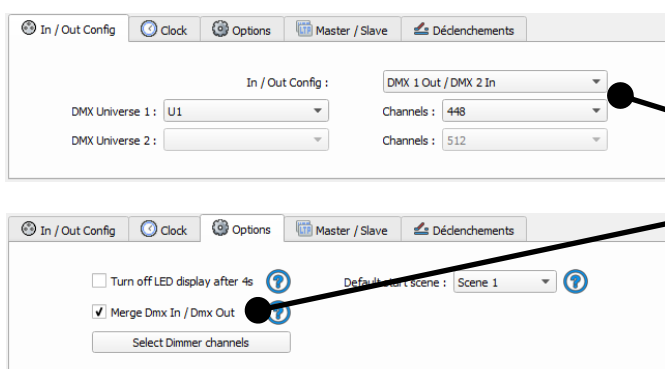
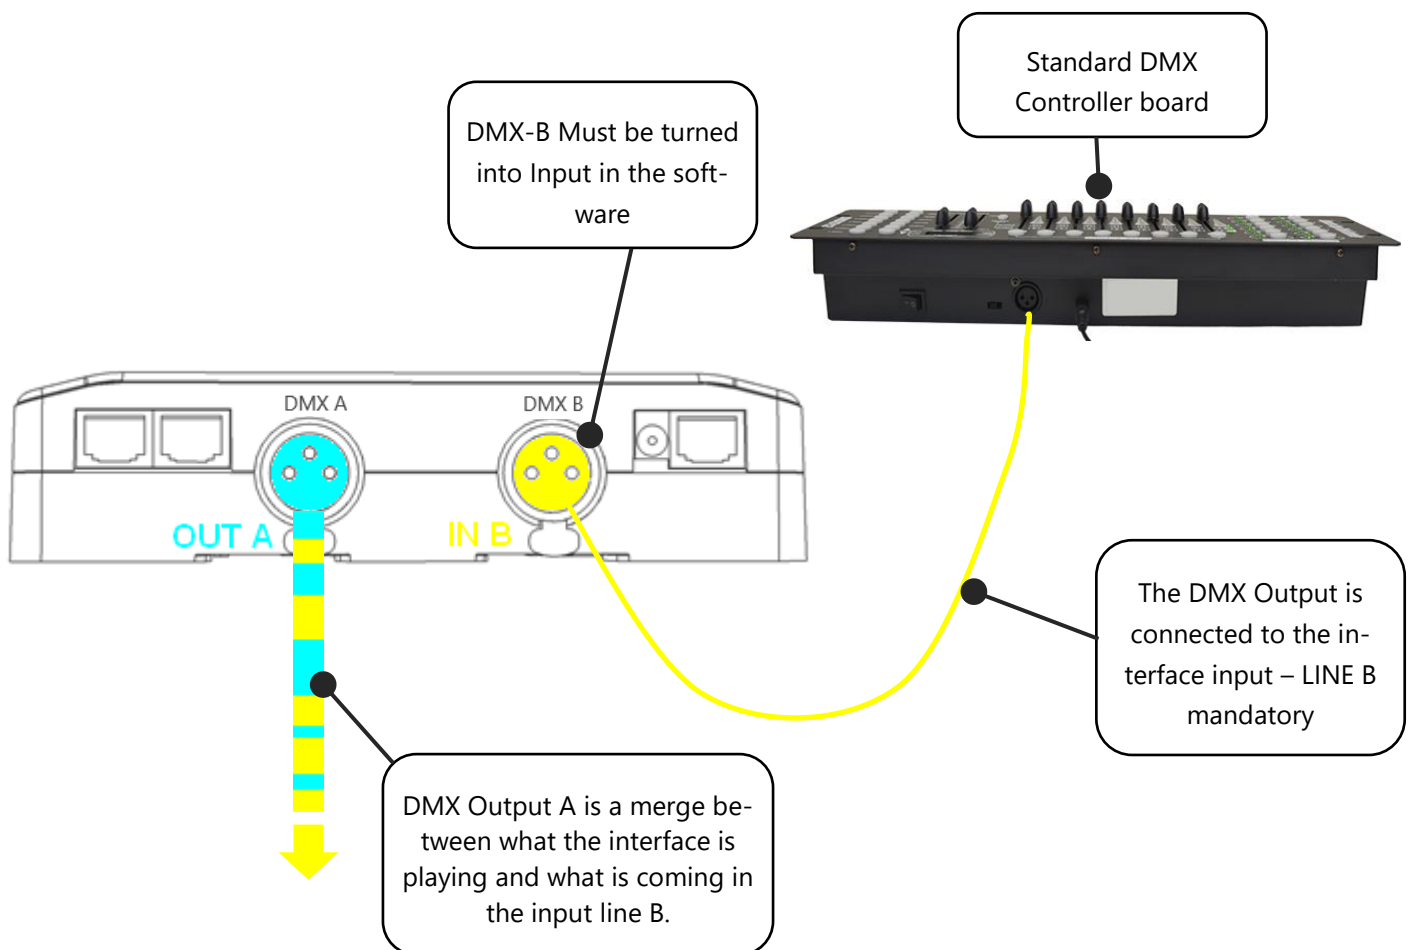


In the software's standalone window, select: "DMX 1 OUT / DMX 2 IN" and validate the merge option.

## CONFIGURATION OF THE MASTER/SLAVE INTERFACES


When multiple interfaces are connected with USB, the standalone mode allows to set them as Master/Slave. This mode allows to synchronise many interfaces and mutualize their standalone spaces combining the universes. (up to 32 standalone universes )

Here are two example of wiring with 3 interfaces plugged as Master/Slave with standard Ethernet cables. You must connect Ethernet sockets 1 or 3 in any order:

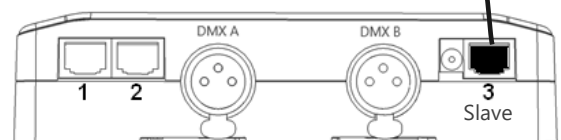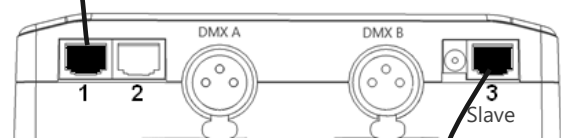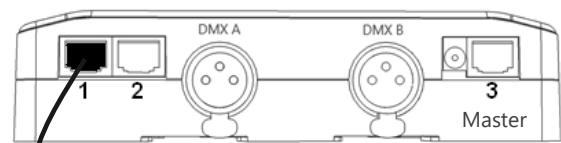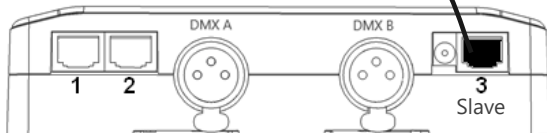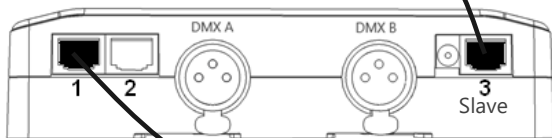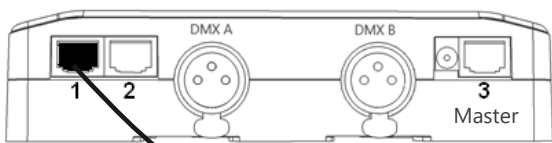

## SETTING OF THE MASTER/SLAVE INTERFACES

A single interface can be define as master, others are automatically set to slaves. Triggers operated on the master interface are passed on slaves. However slaves are not synchronized on play time and keep individual control. Consequently slaves can trig and play different scenes. The master acts like a general remote imposing triggering to the slaves.

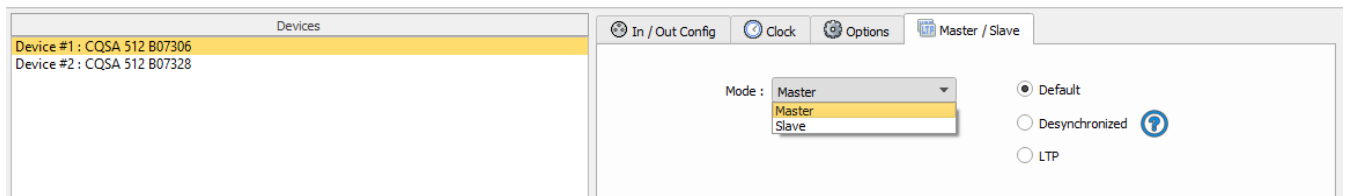

- **MODE MASTER/SLAVE « Default »**

A single interface can be define as master (lower serial number by default), others ones are automatically set to slaves. The master device play the current scene and synchronize the slave ones. The master forces the slave interfaces to play the same scene and the same step at the same time. The slave interfaces are forced to follow the master timings and triggers and they cannot act, play or trigger a scene independently. Master can trigger on and trigger off scenes of the slave interfaces.

- **MODE MASTER/SLAVE « Desynchronized»**

An interface can be define as master, others are automatically set to slaves. All Triggers On or Off operated on the master interface are effective to slave ones. However slave interfaces are not synchronized with master's timing and keep individual controls. Consequently slaves can trigger and play different scenes at any time and not synchronized with the master ones. The master acts like a general remote imposing triggering to the slaves with total priority. Master can trigger ON and trigger OFF scenes of the slave interface.

- **MODE MASTER/SLAVE « LTP »**

LTP means Latest Takes Priority. All interfaces are defined as slaves. Interfaces are not synchronized with timing and can trigger and play different scenes by itself. However triggers from an interface are passed to the others connected interfaces automatically and slave interfaces are forced to trigger the same scene. Here each interface acts like a general remote imposing triggering to the other slaves without synchronization.


- **THE «NO RELEASE» Option**

This option is only available with LTP or DESYNCHRONIZED modes. Only triggers ON from the master interface are executed and effective. All triggers OFF are ignored and slaves interfaces keep playing their current scene. Each Slave interface can choose to release or not its scene depend on the option is activated or not.

## SD CARD

It is possible to save your show on micro SD card. The Card must be format as FAT 32 and 16 Gb Maximum.

In standalone mode, click to "Save on SD card", select a place to save the show on the computer or directly at the micro Sd card root.



To play in standalone the SD show, insert the card into the CQSA micro SD slot and when the card is booted, the display will show "Sd" to indicate that the SD show is playing.

The show file must be paste to the micro SD root, it cannot be played if it is renamed.

## BATTERY


The battery allow to keep the clock and calendar settings in memory when the device is not powered. The clock can keep the time and date up to 10 to 30 days, depending on the charging time and the type of battery included.

The device must be powered few hours to fully charge the battery.



## DIMENSIONS OF THE INTERFACE

The metric system is used. The unit is mm.


### TOP FACE

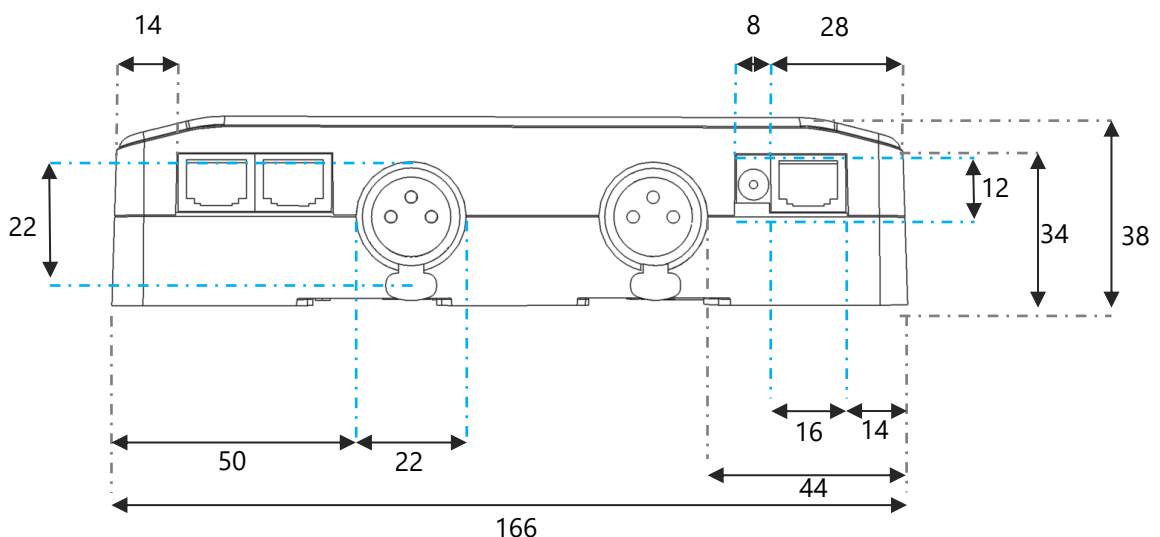

## SIDE FACES

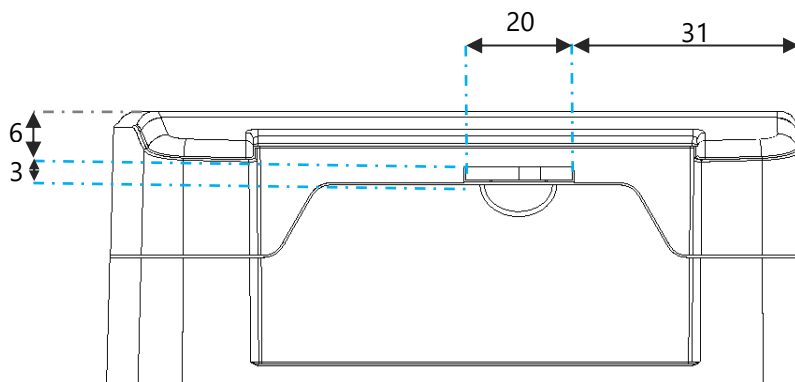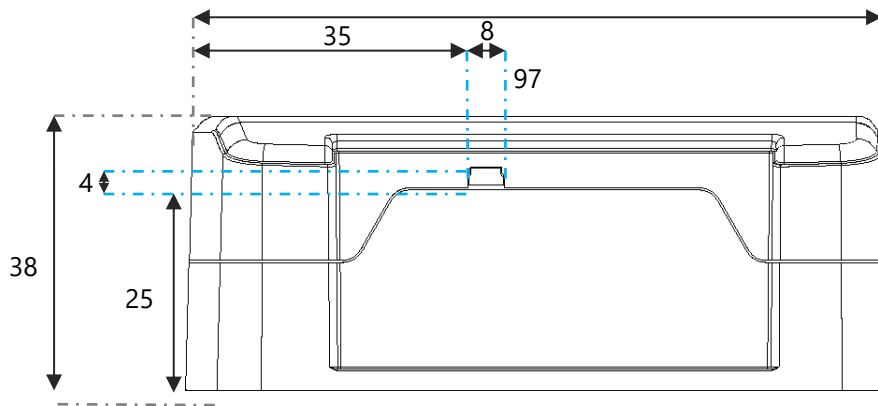


## BOTTOM FACE

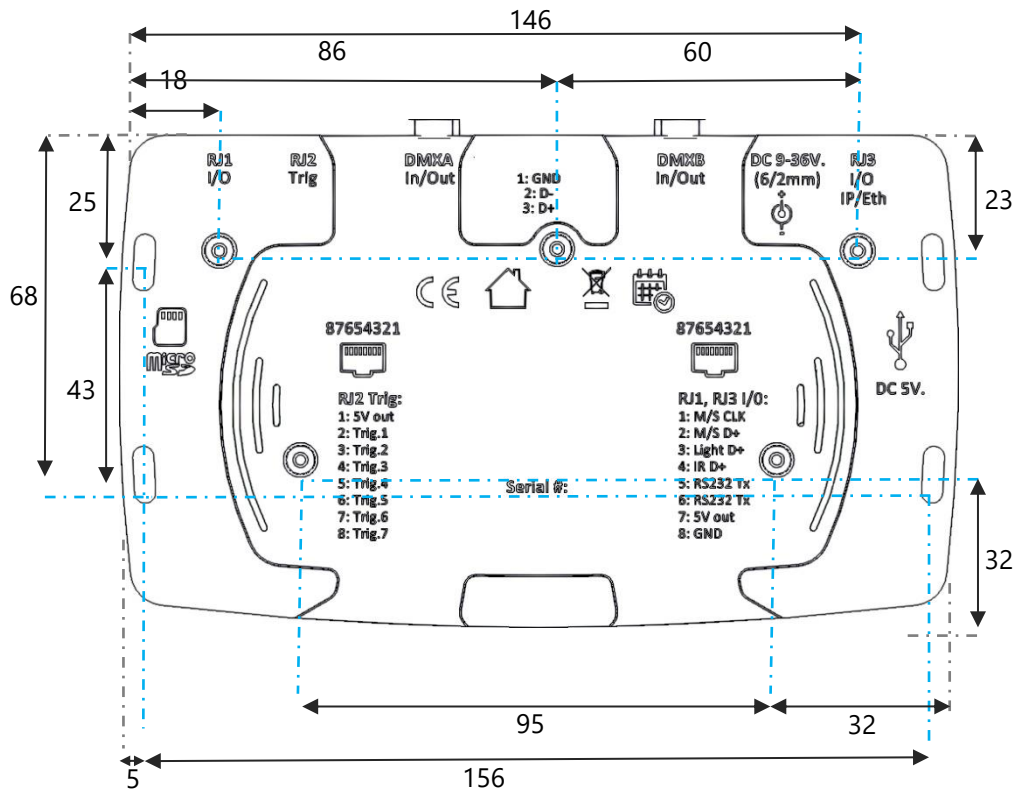




## MULTIPLE USB DEVICES CONNECTIONS

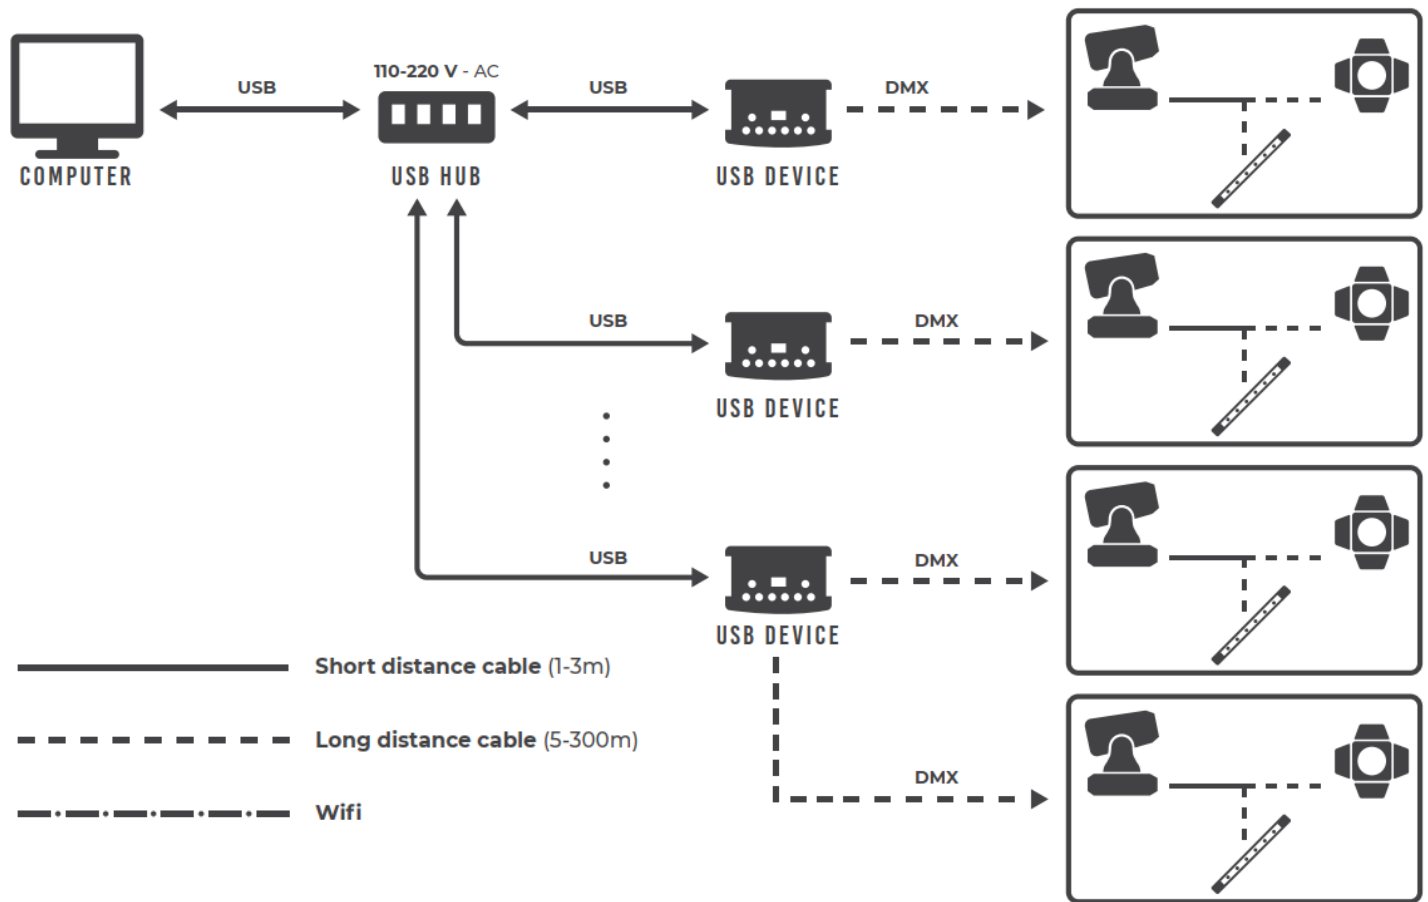

## POWER SUPPLY WITH EXTERNAL + USB

The external power supply is only for Standalone mode. If a USB cable is connected when the device is operating in standalone mode, it reboots to allow the connection to the computer. If scenes are playing in standalone mode it stops them.

## STANDARD DMX 512 INSTALLATION

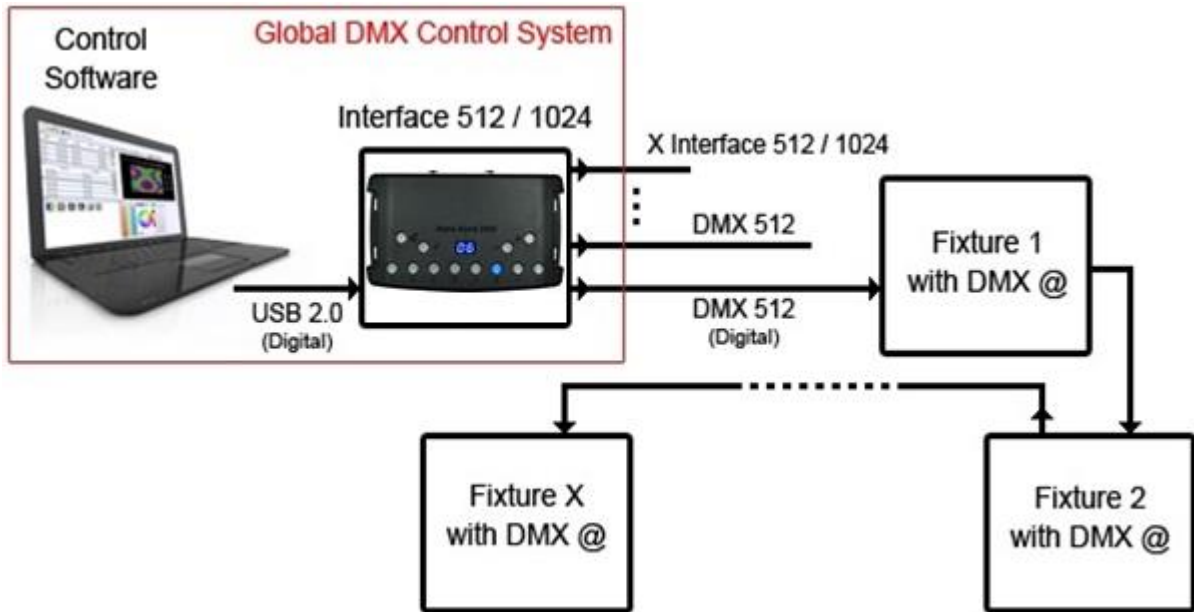

## RECOMMENDED DMX512 INSTALLATION

