

13-Key/4 Zone/Touch color wheel/Wireless remote 30m distance/AAAx2 battery/Magnet stuck fix

Features

- Apply to single color or dual color LED controller.
- Ultra sensitive color adjustment touch wheel.
- Each remote can match one or more receiver.
- AAAx2 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be stuck on back holder.



RS1
4 Zone Dimming



RS2
4 Zone CCT




RS6
4 Channel Dimming



Technical Parameters


Input and Output		Safety and EMC		Environment	
Output signal	RF(2.4GHz)	EMC standard	EN IEC 55015/EN IEC 61547 ETSI EN 301 489-1/-17	Operation temperature	Ta: -30 °C ~ +55 °C
Working voltage	3VDC(AAAx2)	Safety standard	EN 61347-1/-2	Package	
Working current	<5mA	Radio Equipment	ETSI EN 300 440 ETSI EN 300 328	Size	L170 x W45 x H28mm
Standby current	<10µA	Certification	CE RoHS	Gross weight	0.111kg
Standby time	1 year			Warranty	5 years
Remote distance	30m(Barrier-free space)				

Mechanical Structures and Installations

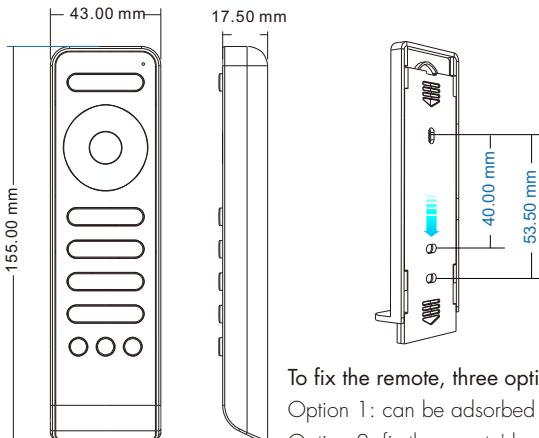

To fix the remote, three options are offered for selection:

- Option 1: can be adsorbed directly onto metal surfaces.
- Option 2: fix the remote's back holder on the wall with two screws.
- Option 3: adhere the remote's back holder to the wall with paster.

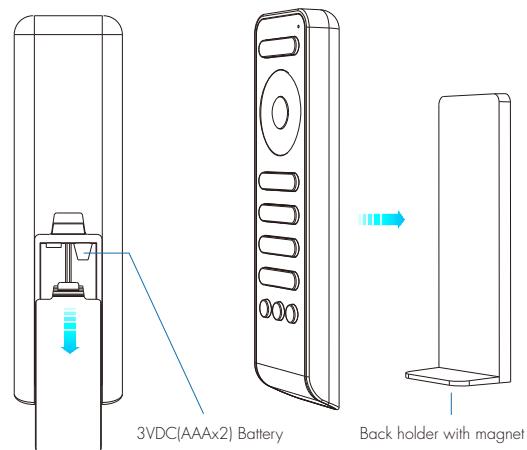

Operation

- When turn on light, the indicator display blue. when turn off light, the indicator display red.
- When touch the color wheel, the indicator will display the same color.
- When press or touch operation is invalid (If the light is off), the indicator display red.
- To extend battery life, no touch or press key operation after a few seconds, the touch wheel will enter sleep state, you need press any key to make touch wheel quit sleep state.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:

Short press match key, immediately press zone on key of the remote. The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart

Match:

Switch off the power, then switch on power, repeat again. Immediately short press zone on key 3 times on the remote. The light blinks 3 times means match is successful.

Delete:


Switch off the power, then switch on power, repeat again. Immediately short press zone on key 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

Key function

• RS1 4 zone dimming remote



• RS2 4 zone CCT remote

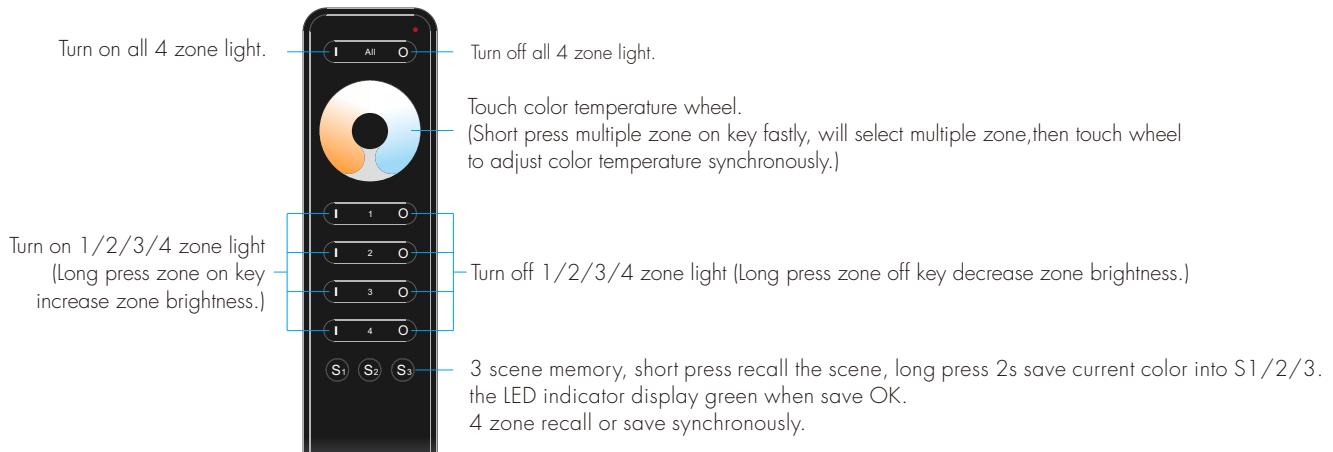

• RS6 4 channel dimming remote



Note: RS6 match with 4 channel receiver only, such as V4, each channel connect with one single color LED strip.

Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.
A long time without the remote control, remove the battery.
When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.